


Contents

1. Attention.....	3
3. Function and Operation.....	5
4 . Basic Operation of Dome Camera.....	7
6. Camera Parameter Setup Menu.....	9
7. Privacy Mask.....	16
8. User Program.....	17
9. System Settings.....	23
10. Language setup.....	28
11. Camera Menu Index.....	29
12. System Installation.....	30
13. Dome Camera Setup.....	37
14. Troubleshooting.....	39
Appendix A : RS485 Bus Basic Knowledge.....	41
Appendix B : The Cleaning of Clear Down Cover.....	42
Appendix C : 24VAC Wire Diameter and Transmission Distance Comparison Chart.....	43
Appendix D : Wire Gauge Conversion Chart.....	44
Appendix E : Lightning Proof and Surge Signal Proof.....	45
Appendix F : Camera parameter.....	47

SAFE PRECAUTIONS

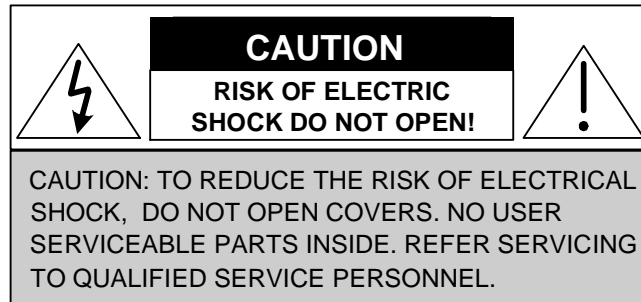

The requirement for the people who will install and repair the machine:

- Owning the certificate to install and repair CCTV system.
- Owning the certificate to work aloft.
- Obtaining the basic knowledge and operating skill of wiring and connection at low voltage.
- Reading carefully and understanding all the contents in this manual.

The requirement for lifting appliance:

- Using the lifting appliance suitable for the speed dome camera installation place and installation types.
- Lifting appliance could reach the installation height.
- Lifting appliance is in good safe condition.

1. Attention

→ Electric Safety

The national and local electric safety standard must be obeyed during the installation.

→ Shipping with Care

Prevent the damage caused by stress, strenuous vibration and moist during the shipping, storing and installation. The products are packed individually, and will not be in warranty due to the damage caused by whole-packaging in shipping.

→ Careful Installation

Please refer to the instruction manual carefully. Do not install the camera in opposite direction, and handle the camera block with care; do not press against the structural element, which may cause mechanical problem. The plastic cover is advanced optical product, please don't touch it directly to avoid the cover scratch and bad image quality.

→ Do Not Disassembly The Camera Without Authorization

Do not tear down the screws and protecting cap of the camera block. There are no spare parts in the camera block for users' maintenance, and only the professional engineers shall check and maintain the camera.

→ Environmental Requirement

- Indoor Environmental Requirement:

Temperature: $-10^{\circ} \sim +50^{\circ}$

Humidity : $< 90\%$

Atmospheric Pressure: $86 \sim 106\text{Kpa}$

AC Supply: $24\text{V} / 2000\text{mA}, 50 / 60\text{HZ}$

- Outdoor Environmental Requirement

Temperature: $-40^{\circ} \sim +60^{\circ}$

Humidity : $< 90\%$

Atmospheric Pressure: $86 \sim 106\text{Kpa}$

AC Supply: $24\text{V} / 2500\text{mA}, 50 / 60\text{HZ}$

→ Do Not Aim Objects in Strong Light

Do not aim the objects in strong light or the sun to avoid the image blur and spectacle , no matter the camera is in use or not.

→ Waterproof

The outdoor speed dome cameras are featured as waterproof, damp proof and dustproof, and could meet the international standard IP66. The indoor speed dome camera can not be installed at the place where there is full of hydrosphere and water. The water drops and splashing may damage the inside components of both the indoor and outdoor cameras.

2. Speed dome camera performance characteristics

2.1 Technical Parameter

Electrical :		Set up :	
Rating Voltage	AC24V	Baud rate (RS485)	2400/4800/9600/19200bps
Power	12W indoor, 35W outdoor	Protocol	Pelco-P / Pelco-D/Phillips / Panasonic and so on, 17 Protocol choice
Operation :		Add. Set up	0-255
Decoder	Internal	Environment :	
Panning angle	360° Continuous rotation	Operation Environment	-40- +60°C
Tilt angle	0°-90°	Humidity	0-95%No condensation
Rotary speed	Level 0.4~270°/S Vertical 0.4~160°/S	Protection level	IP66, 24-hour, safety cover TVS1500W lightning proof surge proof
Alarm	7 input, 2 output	Physical :	
Preset	220	Installation	Ceiling/Corner/ wall type
Surveillance way	Preset/touring/horizontal scan/ Auto learning	Weight(without bracket)	4.25Kg(outdoor)/3.85Kg(indoor)
Speed	Magnification times match with speed	Material	Aluminum

2.2 Performance Characteristics

The speed dome cameras adopt bran-new design and are featured as compact and metal structure. It is equipped with thermostatic apparatus inside, and has rapid heat dissipation function. It is easy and convenient to install. The surveillance is more privy with the inside black cover. The camera rotates flexibly with low-noise and wide coverage, providing excellent image quality for users.

→ Internal Decoder

- Digital design, all data are stored in the camera block, and will not be lost even power down
- All-in-one integrated design, high reliability
- 220 presets
- 1-80 preset supports auto touring; 4 tours, 32 presets of each
- 4 Auto learning
- 4 limited scan
- Internal permanent calendar
- Internal temperature sensor
- RS485 (Optional Manchester code or coaxial monitoring control)
- 24 privacy masking zones
- 7 alarm inputs, 2 outputs normal open/close switch available

→ Internal Pan & Tilt

- All-metal structure, high strength, favorable heat dispersion
- Precise stepping motor drive, reposeful operation, sensitive reaction, and exact positioning
- All-in-one integrated design, compact structure, easy to install.
- Ingenious mechanical drive system, support 360 ° continuous rotation, tilt angle 0-90° and 180 ° reversal
- 0.4 °/S slow-rotation processing without image quivering

→ Internal Digital Camera

- All-in-one Digital Processing with High Sensitive and High-resolution
- Auto Focus
- Auto Brightness Control
- Auto Iris

- Auto AWB
- Color & B/W Transition
- Auto BLC
- Auto Frame Accumulating

→ **OSD Menu**

- Chinese/English Menu
- OSD menu display; change the information and parameter of the camera by keyboard and OSD, operation becomes simple and easy.
- Auto activation function can be set, evoking presets or starting up tours, auto leaning and horizontal scan can be set when the camera is not in use
- Restoring operation before power-down or carry out appointed operation

→ **Internal Temperature Detector**

- Real-time temperature display
- Fans start up when the temperature exceeds the upper limit
- Speed dome will postpone starting up when the temperature is lower than the lower limit
- The fans start up according to real time temperature detection, which makes the fans longevity longer

→ **Real Time Clock Function**

- Real time display, clock can be set
- Real time color & B/W transforming time
- Alarm time can be set

3. Function and Operation

This chapter describes the main function and the realize principle of the speed dome and does not involved in operation. Different system has different method of operation. Usually we use the operation manual from the system company. If you have any special requirements, please contact the system company to get the necessary information.

3.1 Set the Camera Coding

There are two code switches on the camera's pin board, SW1 and SW2, SW1 sets camera address, and SW2 sets baud rate and protocol (See 'Camera Settings' on P38).

Besides the factory protocol, the camera compatible with many main protocol, like: PELCO-D, PELCO-P etc. (Optional ALEC, VCL, MOLYNX, VICON, SANTACHI, PANASONIC, SAMSUNG, DIAMOND, KALATEL, LILIN, PHILIPS and AD and so on.)

Any of the control order must be based on the address. of the target camera, the camera just respond to the order that has the same add of itself. Three types of the address.

- Code switch address. Set by the Code switch on the bracket in the camera (SW1), add. Range:1-255
- Broadcast address: If the customer prefers to use broadcast address, all of the camera in the system will carry out the same action; system 255 is the broadcast address.
- Debugging address: (factory protocol and PELCO protocol only): if the address of the camera is 0, the user can control the camera by any address.

3.2 Auto Carry Out the Operation

→ **Focus / Rev Automatic Matching**

When we use manual adjustment, in the case of far focus, the camera high speed reaction cause the rocker shock may cause the image whisk or image lost. Based on humanization design, the camera automatically adjusts the rev of the tripod head according to the focus. And make the manual tracking object easier.

→ **Automatic Reversal**

If the operator pulling rocker when the lens appoint the bottom, the lens will horizontal whirl 180 ° automatically and whirl 90° upwards, user can watch the views on the back side, so it can realize the 180 ° entire journey surveillance. To realize the function, you need set the “Automatic reversal” in the OSD to ON.

→ **Timing Automatic Activation**

If the camera's not carrying out any operation by using “spare time activation” function, the user can set auto transfer preset or start cruise, self-leaning or limited scan.

→ **Automatic Activation**

By using “restart”, the user can set automatic activation and the camera will recover to the operation before electrify after electrify or restart, it also can be set auto transfer preset or start cruise, self-leaning or limited scan.

3.3 Camera Control

→ **Magnification Times Control**

Through the button named “Three dimension button” or “Wide” and “Tele” button on the keyboard, you can adjust to full view or close-up view. Dome camera supports digital PTZ and optics PTZ, and digital PTZ can be settled.

→ **Focus Control**

System uses auto focus as tacitly approved. When lens change, camera can focus on the view automatically to keep the view clear. Through “FAR/NEAR”, users can adjust it manually in order to have the view you want. When use the keyboard, camera can be back to automatic focusing.

On these conditions, camera can not focus automatically:

- Target not in the centre of view
- Observe close view and distant view at the same time, cannot guarantee both of them are clear
- Target is as high light materials. Such as neon lamp, spotlight and any shine objects
- Target moves so fast
- Big size dull target, such as wall
- Target is too dark or not clear
- Target view is too small

→ **Iris Control**

System uses auto Iris as tacitly approved. It can feel the light around to adjust the iris to keep the output view's luminosity steady.

Users can use “Open/Close” button on the keyboard, adjust the iris manually to get the fittest luminosity. It can be back to automatic iris by using the keyboard.

→ **Face Away from Light Compensating**

Camera district fulfill facing away from light compensating automatically. Under high light background, it will automatically compensate to the light, and adjust the light to the fittest view. This method can avoid whole view with more light, and make the target view more clearly.

→ **Auto White Balance**

Automatic adjust based on the changing of light around, to appear the true color.

3.4 Monitor Function

→ **Set/adjust preset point**

Preset point function is that record the data of horizontal angle, tilt angle and focal distance of camera to the memory. When need, you can use these data to the position. Preset point can be set quickly and easily by using keyboard, you can set two hundred twenty preset points.

→ **Auto Cruising**

Auto cruising is the function of this dome. It can be settled previously, make the preset points as **a** sequence added to the auto cruising. You can inset preset point to the cruising, can fulfill auto cruising between preset points. Cruising sequence can be set. You also can set the stop time of preset point, one cruising, can be set 32 preset points.

→ **Level, Right & Left Scan**

Through keyboard and menu, users can set left position and right position, as **a** speed scan from left to right.

→ **Self-learning**

This dome has the pattern scan function. The dome can record at least 180s moving track. Run the self-learning pattern, according to the record, dome can repeat moving, one dome can set 4 routes.

→ **Privacy masking function set**

Users can set privacy masking function to cover some zone.

→ **Alarm input & output control**

When dome receive a alarm signal, run the preset action, until the alarm is finished. If have some unusual situation, it will send another alarm signal. Dome can set 7 input alarm signals, 2 output signals.

→ **Camera Lens Position Display**

After dome self-check, the position will at 0° of level and vertical place, the level place from 0°-360° , the vertical place from 0°-90°.The information can be displayed on the screen.

4 . Basic Operation of Dome Camera

4.1 Camera Power On Self-Test

After connecting wires and power-on, dome camera executes self-checking program, it will appear system information on the screen, as shown below. Camera will move horizontally to horizontal origin which was default setting when leaving factory, then move vertically to vertical origin, lens is pulled closest and farthest, self-check finished.

Edition number: 1.0.0

Protocol: PELCOD

Baud rate: 9600

Camera ID: 001

This information will be shown until finishing self-test for system.

- Edition number: Shows information of camera software edition
- Protocol: Shows type of control protocol which has been set up
- Baud rate: Shows communication baud rate which has been set up, including 2400, 4800, 9600, 19200 four types of communication baud rate. Detailed setting method as per addenda.
- Camera ID: Set via camera's switch SW1, detailed setting method as per addenda.

4.2 Transfer Main Menu

Open the main menu of system by pressing "menu" key on the control keyboard or by matrix via the operation "Call No. 95 or 64 preset positions". All menu setup must first transfer main menu.

4.3 Basic Operation of Menu and Keyboard

→ **Basic Operation of Keyboard:**

[OPEN] When choosing image, shows increasing iris, it will save automatically after finishing setup.

[CLOSE] When choosing image, shows decreasing iris, it will save automatically after finishing setup.

[NEAR] focus on vicinity

[FAR] focus on beyond

Joystick tilt up: When choosing menu, shows choosing the previous one, when choosing image, shows camera circumgyrating upwards.

Joystick tilt down: When choosing menu, shows choosing the next one, when choosing image, shows camera circumgyrating downwards.

Joystick pan left: When choosing menu, shows entering junior menu, or entering setting up or return to superior menu, when choosing serial number, shows decreasing, when choosing image, shows camera circumgyrating leftwards.

Joystick pan right: When choosing menu, shows entering junior menu, or entering setting up or return to superior menu, when choosing serial number, when choosing serial number, shows increasing, when choosing image, shows camera circumgyrating rightwards.

Three-Dimensional Joystick Circumgyrating Joystick Cap Function: Circumgyrating deasil shows pull image closer, setting date/time/visitatorial data increased, circumgyrating widdershins shows pull image farer, setting date\time\visitatorial data decreased.

→ **Basic Menu Operation**

“Return”: return to superior menu

“Open”: open certain setting

“Close”: close certain setting

4.4 Camera Language Setting

Switch Chinese/English in language setting menu under main menu.

5. Display Settings

1. Press 'Menu' on the keyboard or evoke the presets no. 95 and 64 to enter the main menu, or press the preset no.1 twice continuously within 1 second.
2. Move the joystick horizontally to enter 'CAMERA SETTINGS'.
3. Each item in the menu can be set to 'On' or 'off'.




The information of the camera will change while the camera block rotates, and user can see the inner temperature, zoom times, times, etc on the screen. When all information displays, it will


be as below ('288' indicates the horizontal angle; and '68' indicates the vertical angle.)





Notice:

1. If there is no any operation within 1 minute after entering the main menu, it will be closed automatically.
2. Default values of the items in the menu are 'OFF'.

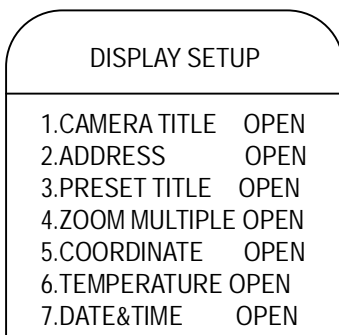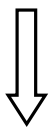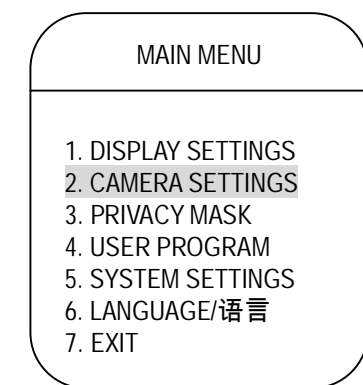

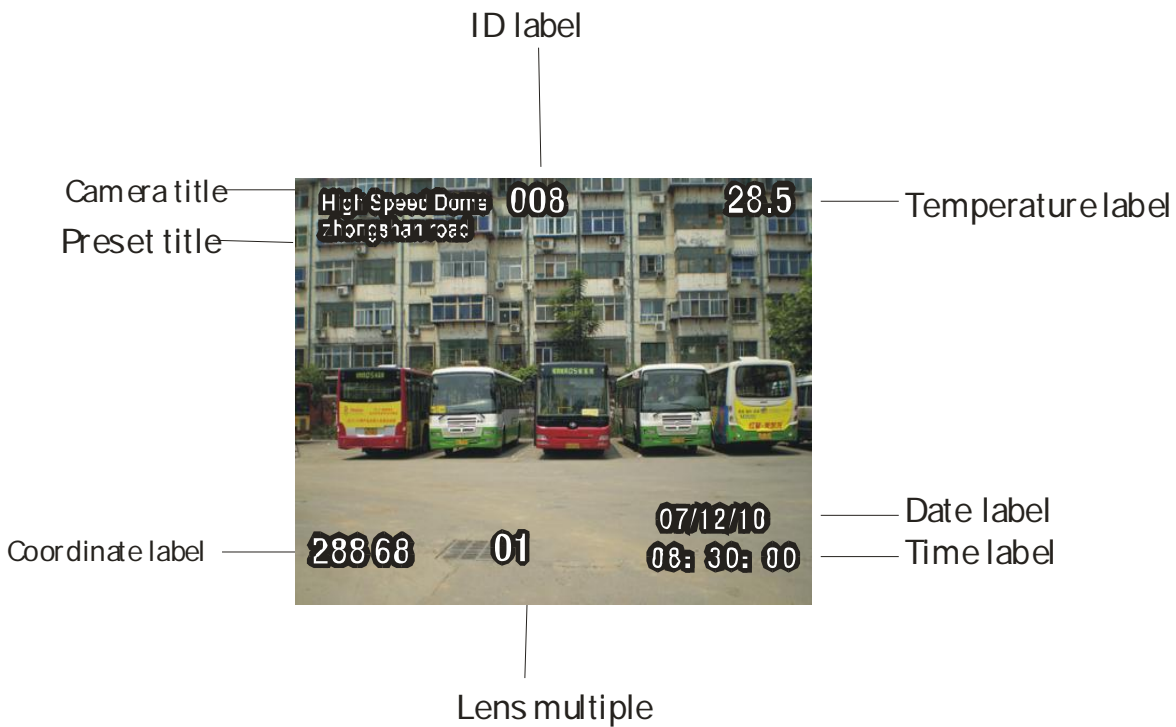


6. Camera Parameter Setup Menu

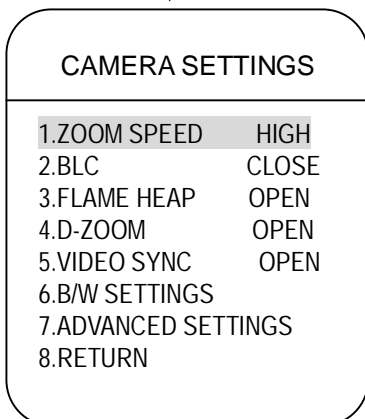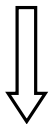

6.1 Zoom Speed

1. Press 'Menu' on the keyboard or evoke the presets no. 95 and 64 to enter the main menu, or press the preset no.1 twice continuously within 1 second.
2. Move the joystick vertically to 'Camera settings', and enter the sub-menu
3. Move the cursor to 'ZOOM SPEED'; Choose 'HIGH' or 'LOW'
4. Move the joystick vertically to 'RETURN'; Exit the menu and the system will save the settings automatically

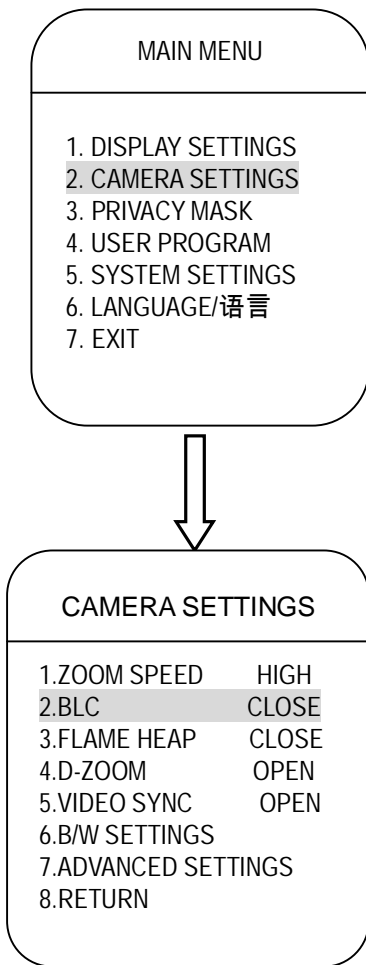

6.2 BLC

1. Press 'Menu' on the keyboard or evoke the presets no. 95 and 64 to enter the main menu, or press the preset no.1 twice continuously within 1 second.
2. Make the cursor to 'CAMERA SETTINGS', and enter the sub-menu;
3. Move the joystick and make the cursor to 'BLC'; move the joystick and choose BLC 'ON' or 'OFF'.
4. Move the joystick vertically to 'RETURN'; Exit the menu and the system will save the settings automatically.

Operation Tips


Strong backlight makes objects cast shadows. BLC function makes the speed dome camera adjust aperture to fit the lights changing, and calibrate image brightness to make the image clearer.

Notice:



1. This function relates to the camera block model and parameters. While enabling BLC, it will adjust automatically (Choosing 'ON').
2. BLC can be set only while [exposure mode] is [AUTO]
3. BLC may be different due to different camera blocks. SANYO has 3 options: [OFF], [Control AREAS, and [All AREAS].



Without choosing backlight
backlighting side is darker
under strong sunshine .

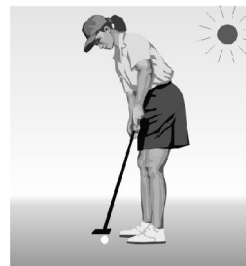

With choosing backlight,
the image is normal.

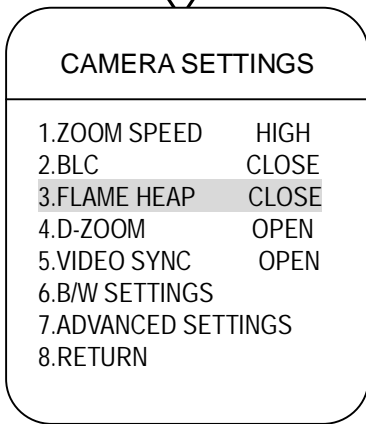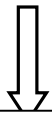

6.3 Frame Heap

1. Press 'Menu' on the keyboard or evoke the presets no. 95 and 64 to enter the main menu, or press the preset no.1 twice continuously within 1 second.
2. Move the joystick and make the cursor to 'CAMERA SETTING', enter the sub-menu.
3. Move the joystick and make the cursor to 'FRAME HEAP', choose 'ON' for enabling the slow shutter function and 'OFF' for disabling this function.
4. Move the joystick up and down to 'RETURN' to exit the menu and save the settings.





Operation Tips

When the speed dome camera is used at night or in dark place, you can setup slow shutter, which can lengthen the lighting time and make the picture more clearly!



Notice:

1. This function correlates the camera model and parameter. That is not effective if the camera has no this function.
2. The flame heap can be set only in condition that the 'exposure mode' is 'AUTO'.
3. This function may be different due to different camera blocks; for SANYO camera, here it is 'Gamma setup', which include 'OFF', 'ON' and 'BRIGHTNESS ENHANCING'.

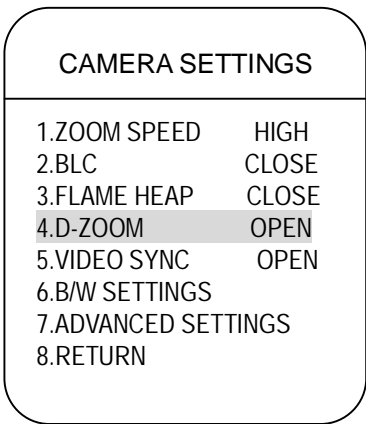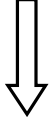






6.4 D-Zoom Settings

1. Press 'MENU' on the keyboard or evoke the presets no. 95 and 64 to enter the main menu, or press the preset no.1 twice continuously within 1 second.
2. Move the joystick and make the cursor to 'CAMERA SETTINGS', enter the menu.
3. Move the joystick and make the cursor to "D-ZOOM", choose "ON" to control the zoom, and choose 'OFF" to enable this function.
4. Move the joystick up and down to 'Return' to exit the menu and save the settings.

Operation Tips

When the digital zoom function is activated, the camera's largest zoom times is the optics zoom multiplying the digital zoom; while the digital zoom function is enabled, the camera's largest zoom time is just the optics zoom time.

If the camera block is Sony, LG or CNB branded, the digital zoom option is on/off!

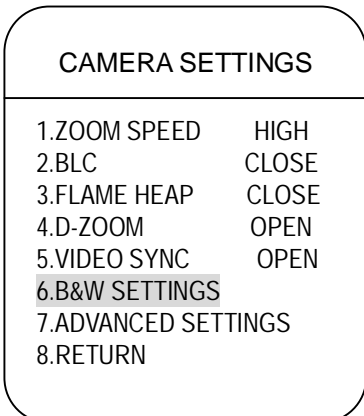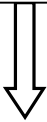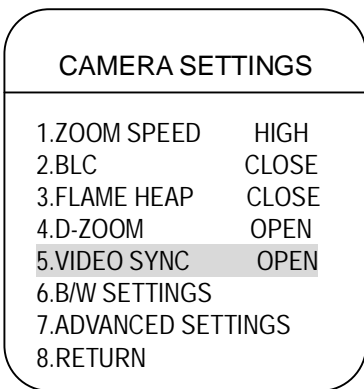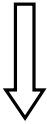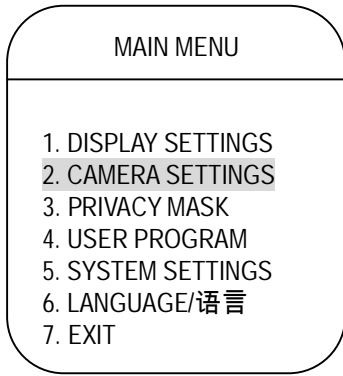

6.5 Video Sync

1. Press 'Menu' on the keyboard or evoke the presets no. 95 and 64 to enter the main menu, or press the preset no.1 twice continuously within 1 second.
2. Move the joystick and make the cursor to 'camera settings', enter the menu.
3. Move the joystick and make the cursor to "VIDEO SYNC" and setup this function; choosing 'OFF for internal sync and 'OPEN' for external sync.

Operation Tips

When several speed dome cameras use one terminal video device, the image may flicker meanwhile switching the pictures. To solve this problem, set each camera to external sync, and adjust the sync value.

6.6 B & W /Color Switch







1. Press 'MENU' on the keyboard or evoke the presets no. 95 and 64 to enter the main menu, or press the preset no.1 twice continuously within 1 second.
2. Move the joystick and make the cursor to 'CAMERA SETTINGS', and enter the menu.
3. Move the joystick and make the cursor to 'B&W SETTING', and enter the next menu.
4. Make the cursor to 'B&W SETTING'; move the joystick to choose switch modes. There are 4 modes available: AUTO, TIMING, B&W and COLOR. 'AUTO' is the default mode.
 - AUTO: Color & B/W automatically switches according to illumination.
 - TIMING: Setup the time for Color & B/W switch, and the time setting is effective only in timing mode.
 - COLOR: Color mode setup
 - B & W: B & W mode setup
5. Move the joystick vertically to 'return' and exit the menu.

Operation Tips

Color/B&W auto switch ensures the image quality and save storage space.

Notice

1. This function relates to the camera block model and parameter; If the camera block has no this function, the 'Color/B&W auto switch' option is ineffective.
2. Clockwise rotate the tridimensional rocker cap, the time value will be bigger; otherwise, the time value will be smaller.
3. Only 'TIMING' is chosen for 'B&W SETTING', the timing setup is effective.

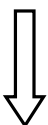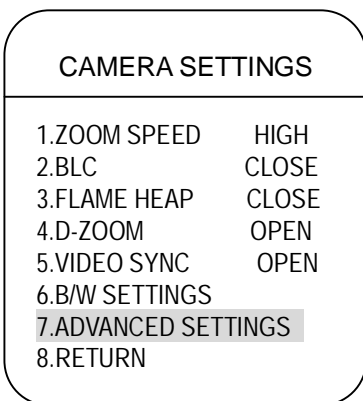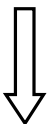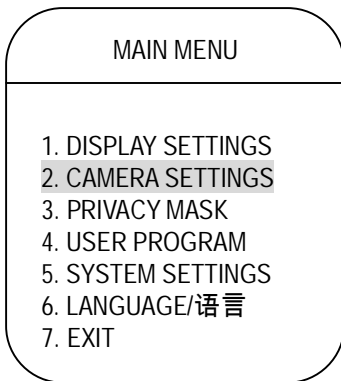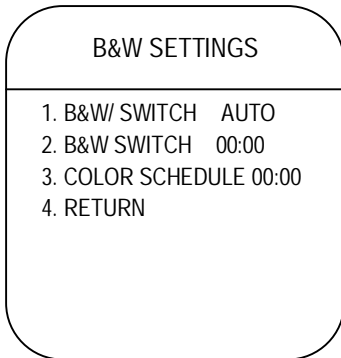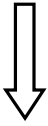

6.7 Advanced Settings

1. Press 'Menu' on the keyboard or evoke the presets no. 95 and 64 to enter the main menu, or press the preset no.1 twice continuously within 1 second.
2. Move the joystick and make the cursor to **[CAMERA SETTINGS]**, enter the menu.
3. Move the joystick and make the cursor to **[ADVANCED SETTINGS]** and enter the sub-menu shown in the left:

6.7.1 Exposure Mode

1. Move the cursor to **[EXPOSURE]**, and there are the following modes for selection:
 - **[AUTO]: Default setting**
 - **[BRIGHTNESS PREFs]**
 - **[AI PREFs]**
 - **[AE PREFs]**
2. While choosing AI PREFs mode, the iris value 'F1.4' can be set. Move the joystick to choose the proper iris, the setup will be saved when exiting the menu.
 - **[1/50]:** Shutter speed; It can be set only when 'AE PREFs' is chose;
 - **[F1.4]:** AI value; It can be set only when 'AI PREFs' is chose;
 - **[F2.0/10dB]:** Brightness; It can be set only when 'BRIGHTNESS PREFs' is chose;

Operation Tips

The picture quality relates to light exposure, i.e. the light throughput that can ensure the CCD to gain clear image.

The exposure relates to the light through time (decided by AE SPEED) and light through area (decided by Iris value).


The camera calculates the proper exposure according to the object brightness and CCD light sensitiveness, etc.

On the condition that the exposure is definite:

- [AE]: the camera will automatically decide the AI;
- [AL]: the camera will automatically decide the AE speed;
- [BRIGHTNESS]: control the image brightness

Notice:

All functions in 'Advanced Settings' depend on the camera block and its parameters.





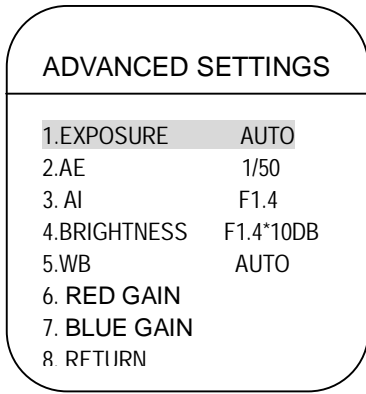


6.7.2 WB Mode

The system has the following WB modes: [Auto], [Manu], [Self- adjustment], [Single lock], [Indoor], [Outdoor], etc.

See detailed operation steps as below:



1. Enter the main menu
2. Move the joystick and make the cursor to **[Advanced Settings]** , Enter the sub-menu and chose 'WB' mode. The setup will be saved when exiting the menu.

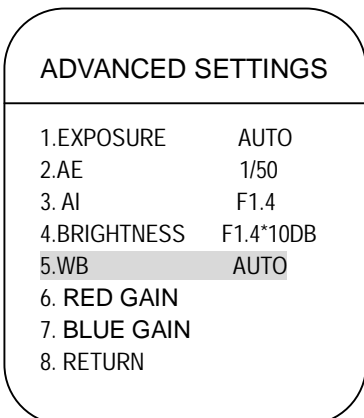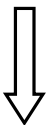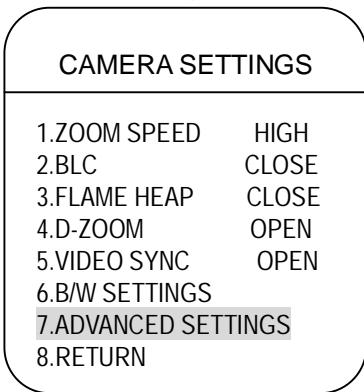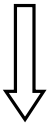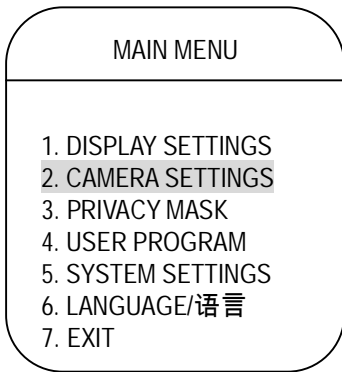

[AUTO] is the default mode; the WB sensor of the camera will detect the environment, and enable the color reproduction. If you choose **[MANU]** mode, the **[RED GAIN]** and **[BLUE GAIN]** value can be set.

- **[RED GAIN]**: value from 0-255, bigger value indicates more red, and the hue gets warmer.
- **[BLUE GAIN]**: Value from 0-255, bigger value indicates more blue, and the hue gets colder.
- **[INDOOR]**: The hue tends to be colder
- **[OUTDOOR]**: The hue tends to be warmer
- **[SELF ADJUSTMENT]**: The WB sensor of the camera will detect the working environment and relative parameter changes
- **[SINGLE LOCK]**: the WB sensor won't detect even the working environment changes

7. Privacy Mask

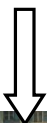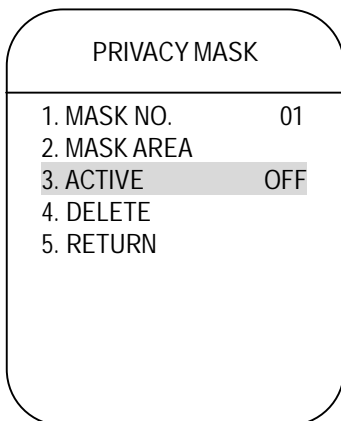







This function will make concerned area masked, for example, the window of the bedroom or ATM in the bank. The speed dome camera maximally support 24 privacy mask zones (This function relates to the camera block model, and the mask window numbers may differ due to different cameras) .

Hitachi Camera: maximally supporting 8 privacy zones in 360° inspecting area, and 2 zones can be set maximally per screen. The screen will show 'PLEASE MOVE' once relevant area can't be masked, for example when the downward horizontal angle of the lens is $\leq 45^\circ$.

SONY Camera: maximally supporting 24 privacy zones in 360° inspecting area, and 2 zones can be set maximally per screen. Relevant area can't be masked when the downward horizontal angle of the lens is $\leq 45^\circ$. LG and CNB cameras have no the privacy mask function.

1. Press 'Menu' on the keyboard or evoke the presets no. 95 and 64 to enter the main menu, or press the preset no.1 twice continuously within 1 second.
2. Move cursor to [PRIVACY MASK] and enter the menu.
 - [MASK NO.]: Choose the mask no. as the privacy mask area.
 - [MASK AREA]: Define the current privacy mask window
 - [ACTIVE]: Enable/disable the privacy area. [ON]---Enable current privacy mask area; [OFF] ---disable current privacy mask area;
 - [DELETE]: Delete current privacy area settings
3. Define current privacy mask window: choose the window no., and then operate as follows:
 - a. Make the cursor to [PRIVACY AREA], and enter the menu; Move the joystick, and make the privacy area displayed on the screen;
 - b. Press [OPEN], privacy area can be set: move the joystick downward/upward/rightward /leftward, the privacy area will be higher/ shorter/wider/narrower.
 - c. Press [OPEN], to save current privacy mask settings; and the window status will be open automatically.

8. User Program

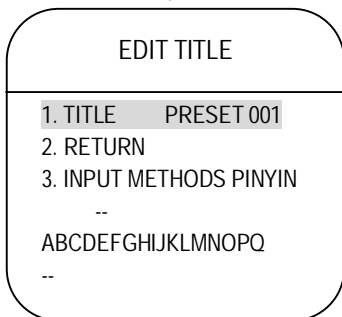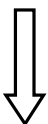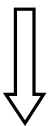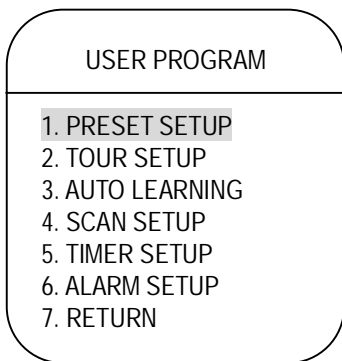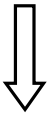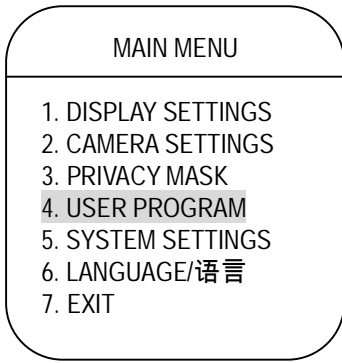

8.1 Preset Setup

1. Press 'MENU' on the keyboard or evoke the presets no. 95 and 64 to enter the main menu, or press the preset no.1 twice continuously within 1 second.
2. Choose current preset no.; Move the cursor to [NO.]. Move the joystick to choose preset no. from 001-220. No. 1 is current preset point.
3. Set current preset: move cursor to [Set], move joystick to change the zoom times; focus on the object and press [OPEN] to save.

Operation Tips

- The preset function is to save relative information to memories, like the pan horizontal angle, tilt angle and lens parameters, etc.
 - Successful operation notice will be displayed on the screen.
4. Call: Move the cursor to [CALL]; current preset will be appearing on the screen.
 5. DELETE: Move the cursor to [CALL]; current preset will be deleted.
 6. Edit Title: Move the cursor to the [EDIT TITLE], and enter the menu. Use keyboard to edit the title.
 1. Chinese Character Inputs: Choose 'Pinyin' from 'Input methods'; move the flashing cursor to the underline beneath the alphabets; move the joystick left and right, and move the spelling of relevant Chinese characters to the underline, press [OPEN] on the keyboard to confirm. At the moment, the Chinese characters appear at the underlines above the alphabets. Move the flashing cursor to the underline beneath the Chinese characters; move the joystick left and right, and move the relevant Chinese character to the underline, press [OPEN] to confirm edition.
 2. Delete edited content: move the cursor to the title, the title will flash. Press [CLOSE] to delete the characters from right to left
 3. Delete Pinyin alphabets: move the cursor to the underline beneath the alphabets, press [Close] to delete.






Notice:





1. Choose preset number before the operation, like deleting, and editing title, etc.
2. Maximum 16 characters can be set for the title, with input methods of Pinyin, numbers, symbol and English, etc. Characters include 0-9, A-Z, Chinese, and

8.2 Tour Setup

Auto Tour is defined as a sequential moving from preset to preset and dwell for a specific time at each preset. It is useful if you need to repeat switching among a number of presets. Each sequence can contain up to 32 presets and dwell time for each preset is independent.

1. Press 'Menu' on the keyboard or evoke the presets no. 95 and 64 to enter the main menu, or press the preset no.1 twice continuously within 1 second.
2. Move the cursor to [USER PROGRAM]. Move the joystick to enter the sub-menu.
3. Move the cursor to [TOUR SETUP], and then enter the sub-menu.
4. Tour Number Setup: set the tour no. within 0-4. Move the cursor to [STAY TIME] to edit it from 000-255(seconds).
5. Tour Line Setup: Move the cursor to "00-00-00...00" Move the joystick to activate the first position, and then circumvolve the cap of rocker to adjust the number of preset. Move the cursor to next position, move again the cursor to last position. The range of the presets is 1—80, each route can be setup 32 presets.
6. Execute: move the cursor to [EXECUTE]; the camera will implement this function.

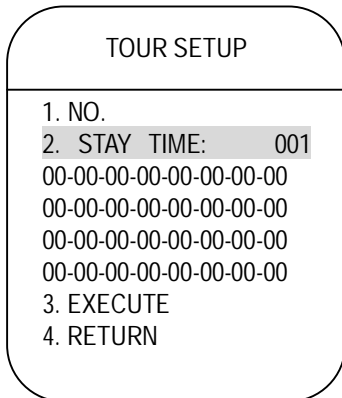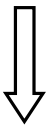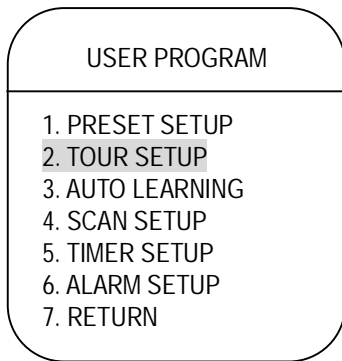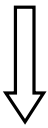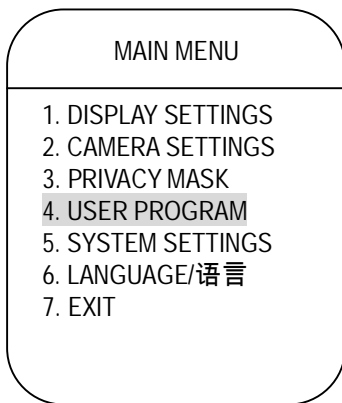

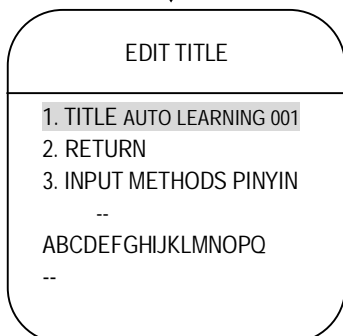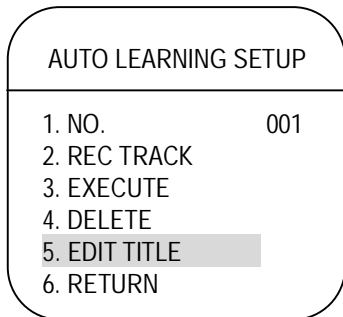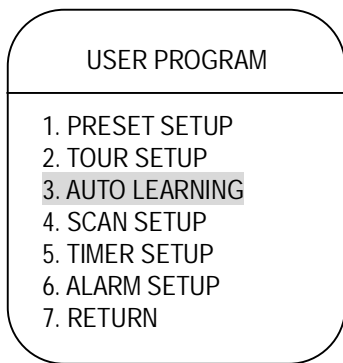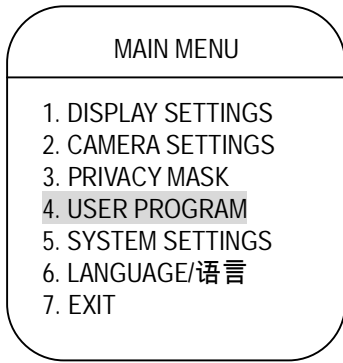

8.3 Auto Learning

The camera will at least record the special routing (Pan & Tilt control, or camera control demand, etc) for 180 seconds continuously. There are 4 auto learnings maximally.






1. Press 'MENU' on the keyboard or evoke the presets no. 95 and 64 to enter the main menu, or press the preset no.1 twice continuously within 1 second.
2. Move the cursor to [USER PROGRAM]. Move the joystick to enter the sub-menu.
3. Move the cursor to [AUTO LEARNING], and then enter the sub-menu.
4. Choose number: Move the cursor to [NO.], the item that is chose will be the current auto learning, and the following operation will be for it only.
5. Define the record track: move the cursor to [RECORD TRACK], and enter the menu. Using the joystick to move the image or change the zoom times. The camera will at least record the route for 180 seconds continuously; and the stay tome, zoom times and focus records will be recorded; Press [OPEN] to save current settings, and [CLOSE] to cancel the settings.
6. Execute current mode: move cursor to [EXECUTE], the camera will run the special route continuously.
7. Edit Title: Move the cursor to the [EDIT TITLE], and enter the menu. Use keyboard to edit the title.

1. Chinese Character Inputs: Choose 'Pinyin' from 'Input methods'; move the flashing cursor to the underline beneath the alphabets; move the joystick left and right, and move the spelling of relevant Chinese characters to the underline, .press [OPEN] on the keyboard to confirm. At the moment, the Chinese characters appear at the underlines above the alphabets. Move the flashing cursor to the underline beneath the Chinese characters; move the joystick left and right, and move the relevant Chinese character to the underline, press [OPEN] to confirm edition.
2. Delete edited content: move the cursor to the title, the title will flash. Press [CLOSE] to delete the characters from right to left
3. Delete Pinyin Alphabets: move the cursor to the underline beneath the alphabets, press [CLOSE] to delete.



Notice:

1. Choose preset number before the operation, like deleting, and editing title, etc.
2. Maximum 16 characters can be set for the title, with input methods of Pinyin, numbers, symbol and English, etc. Characters include 0-9, A-Z, Chinese and symbol, etc.

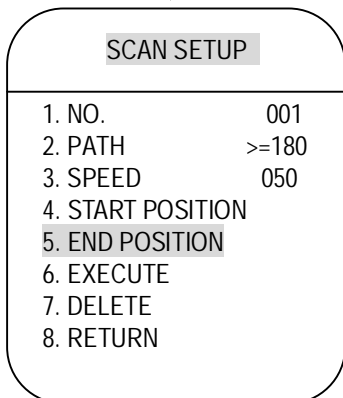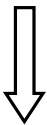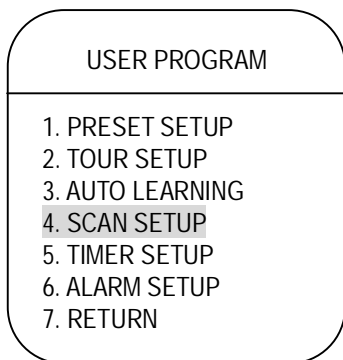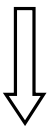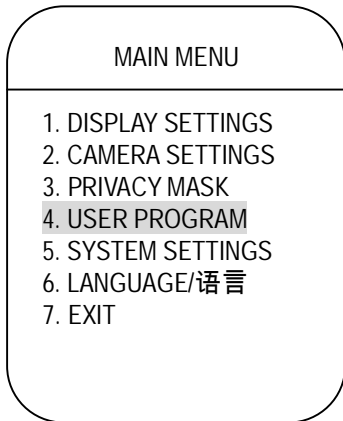

8.4 Scan Setup

1. Preset 2 points first, the camera will scan between 2 presets horizontally with stable speed and same zoom time. A speed dome camera has 4 groups of scans.
2. Press 'MENU' on the keyboard or evoke the presets no. 95 and 64 to enter the main menu; choose menu to enter the 'SCAN SETUP' as shown in the left figures.
3. Choose [NUMBER], There are 4 scans available.
4. Scan Speed Setup: move the cursor to [SPEED] to choose from 001-063;
5. Start Position : Move the cursor to [START POSTITION]; move the joystick to choose object image, press [OPEN] to save. The end position setup is the same way as start position.
6. Execute the scan: Make the cursor to [EXECUTE], and move the joystick to enter the menu. The camera will execute the scans.
7. [DELETE]: Delete current scan.








Note:

1. If the start position and end position are the same point, the camera will run at constant speed.
2. During the scan, the speed, zoom time and vertical direction will keep unchanged; if these parameters are not the same for the 2 points, the scanning will be subject to the start position.
3. Auto scanning will be titled automatically, which will be displayed on the screen, like auto scan 001.

8.5 Timer Setup

This function sets the time for executing presets, scan, tour and auto learning.

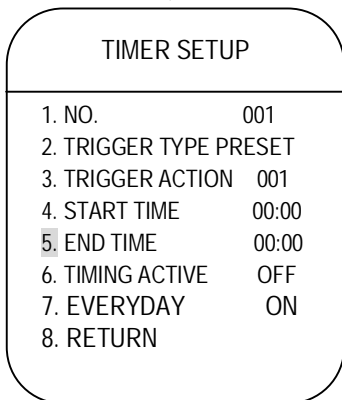
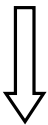
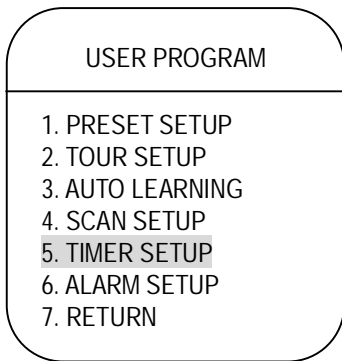
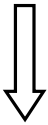
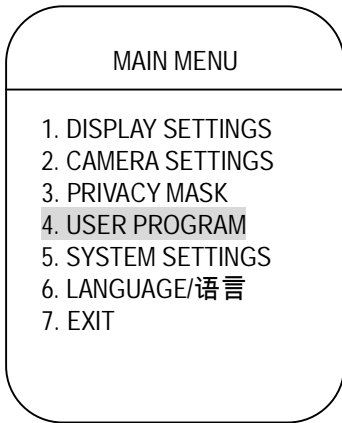


1. Press 'MENU' on the keyboard or evoke the presets no. 95 and 64 to enter the main menu, or press the preset no.1 twice continuously within 1 second.
2. Move the joystick and make the cursor to [USER PROGRAM], and enter the sub-menu.
3. Move the cursor to [timer Setup] and enter the menu as shown in the left:
 - [NO.]: 8Channels in total
 - [START TIME]: The start time to execute relevant channel
 - [END TIME]: The end time to execute relevant channel
 - [TRIGGER TYPE]: Choose the execution functions of pointed channels; each channel can set Closing preset/Scan/Tour/Auto learning (1-4).
 - [TRIGGER ACTION]: Execute relevant channel
 - [TIMING ACTIVE]: Activate the timing device
 - [EVERYDAY]: Executing the timing switch everyday
4. If the function is closed, the time period of this channel won't conflict with other channels



Notice:

1. During the scan, touring or auto learning, once the presetting time is over, the current action will be stopped, and the camera will resume to previous status and position before presetting time.
2. Idle running function s not allowed during the timing period;
3. The timing functions will not be executed while setting presets, recording auto learning, setting start/end positions and menu status, etc.

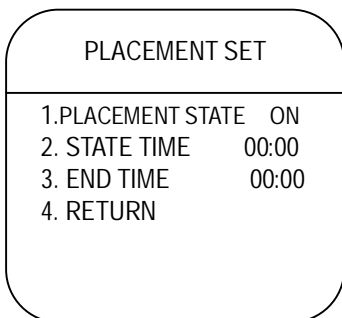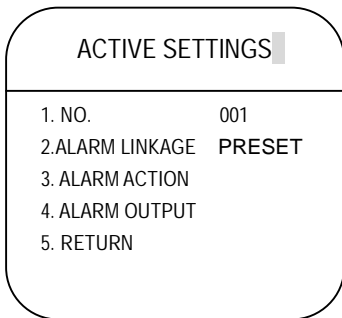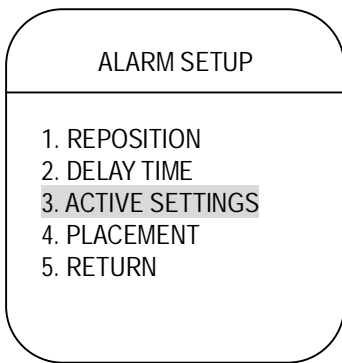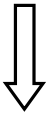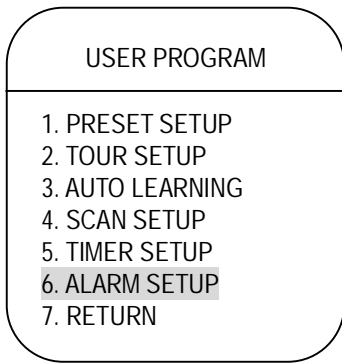

8.6 Alarm Setup

The dome camera supports 7 alarm inputs and 2 outputs; It can realize alarm-linkage, external alarm info transmitting to camera, alarm position shooting (evoke presets, or startup auto touring, auto learning and scan), and decides executing the alarm output or not.

1. Press 'MENU' on the keyboard or evoke the presets no. 95 and 64 to enter the main menu, or press the preset no.1 twice continuously within 1 second.
 - **[REPOSITION]** 2 options: 'ON'-Delete alarm output, and the camera will stop. 'OFF' -delete alarm output and the camera will keep the current status. (The delay time must be longer than 3 seconds while setting this function to be 'ON')
 - **[DELAY TIME]** Set the time that system will auto reset the alarm after current alarm inputs. Values: 1 to 255 seconds
 - **[OUTPUT STATUS]** Set relay status. There are 2 states. NO or NC (Normal Open or Normal Close). Choosing NC, the relay will be closed when there is no alarm output; and the replay will be opened while there is any alarm output.

8.6.1 Active Settings

Move the cursor to Active Settings, select the item to access its submenu.

- **[NO.]** Edit the number of alarm input channel(001-007).When there are two alarm inputs number 001 and number 002 at the same time, the dome will respond to number 001 first.
- **[ALARM LINKAGE]** Set auto respond function. OFF/ Auto Panning/ Pattern / Preset Cruise /Call preset. For example: Alarm channel 001 call preset 1, alarm channel 002 call preset 2.
- **[ALARM ACTION]** Select respond output channel for current alarm input. OFF, 1, 2, 1&2
- **[ALARM OUTPUT]:** Alarm outputs options while there is alarm input: Null-no Alarm output/alarm output 1/alarm output 2/both.


8.6.2 Placement Set

Move joystick and make the cursor to [Placement set], and enter the placement set menu, there are 2 modes:

[ON] Enable this function

[OFF] Disable this function

[START/END TIME] Set the start/end time period for alarm; If the placement state is On, START/END TIME must be set to make the alarm action effective.




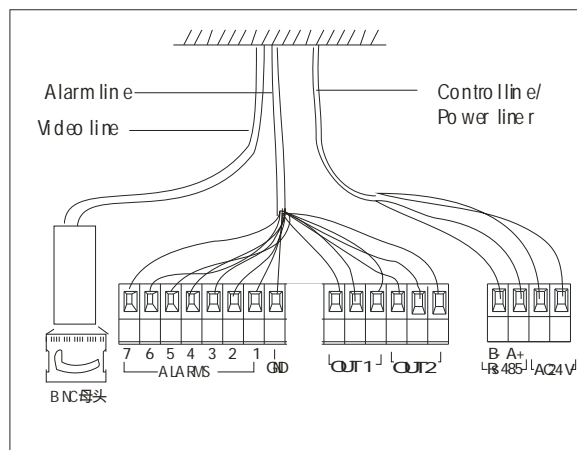


Pin alarm connection paraphrase:

7 Pin alarm input	
BLUE	ALMIN COM
PINK	ALARM-1IN
WHITE	ALARM-2IN
BLACK	ALARM-3IN
RED	ALARM-4IN
ORANGE	ALARM-5IN
YELLOW	ALARM-6IN
GREEN	ALARM-7IN

2Pin alarm output	
AQUA	ALMOUT- COM
AZURY	ALMOUT-1 NC
PURPLE	ALMOUT-1NO
BROWN	ALMOUT-2COM
GRAY	ALMOUT-2NC
SHIELD	ALMOUT-2 NO

9. System Settings

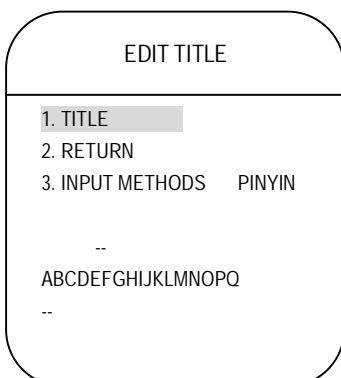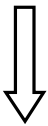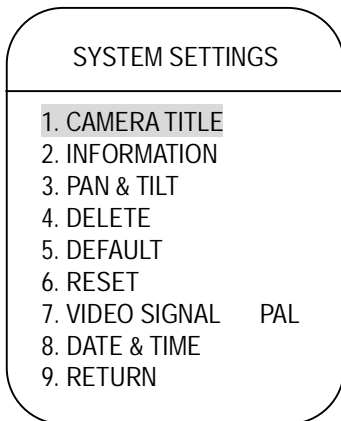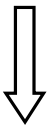

9.1 Camera Title

Dome title, it is the title of the dome. Assigning a name to a dome helps user to remember which dome it is.

1. Press 'Menu' on the keyboard or evoke the presets no. 95 and 64 to enter the main menu, or press the preset no.1 twice continuously within 1 second.
2. Move the joystick down to select the 'System Settings', then move the joystick left or right to access the sub-menu.
3. Move the joystick down to 'Camera title'.

Operation Tips:

1. Chinese Character Inputs:

Choose 'PINYIN' from 'INPUT METHODS'; move the flashing cursor to the underline beneath the alphabets; move the joystick left and right, and move the spelling of relevant Chinese characters to the underline, press [OPEN] on the keyboard to confirm. At the moment, the Chinese characters appear at the underlines above the alphabets. Move the flashing cursor to the underline beneath the Chinese characters; move the joystick left and right, and move the relevant Chinese character to the underline, press [OPEN] to confirm edition.


2. Delete Edited Content: Move the cursor to the title, the title will flash. Press [Close] to delete the characters from right to left

3. Delete Pinyin Alphabets: Move the cursor to the underline beneath the alphabets, press [CLOSE] to delete.



Notice:




1. Choose preset number before the operation, like deleting, and editing title, etc.
2. Maximum 16 characters can be set for the title, with input methods of Pinyin, numbers, symbol and English, etc. Characters include 0-9, A-Z, Chinese and symbol, etc.

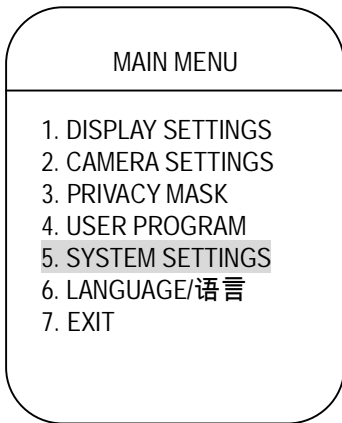

9.2 Information

1. Press 'Menu' on the keyboard or evoke the presets no. 95 and 64 to enter the main menu, or press the preset no.1 twice continuously within 1 second.
2. Move the cursor to [SYSTEM SETTINGS], and enter the sub-menu;
3. Move the cursor to [INFORMATION], the default info of the camera will be displayed on the screen.






Default info includes software version, camera address, and communication parameters.

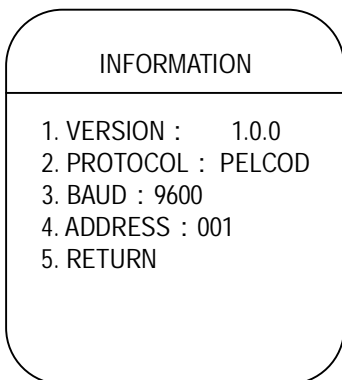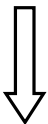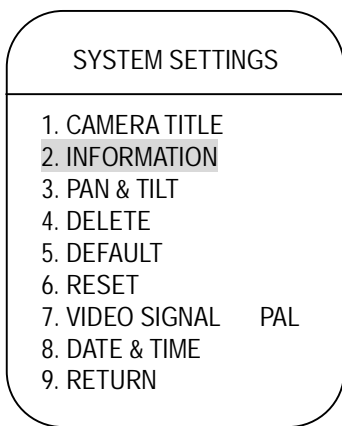

9.3 Pan and Tilt

The settings can control series of normal actions. It plays an important role to control the image display.

1. Press 'MENU' on the keyboard or evoke the presets no. 95 and 64 to enter the main menu, or press the preset no.1 twice continuously within 1 second.
2. Move the cursor to [SYSTEM SETTINGS], and enter the sub-menu;
3. Move the cursor to [PAN & TILT], and enter the sub-menu as shown in the left.

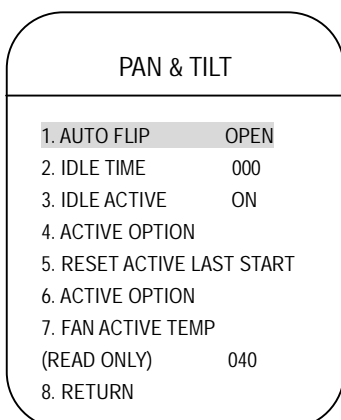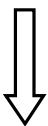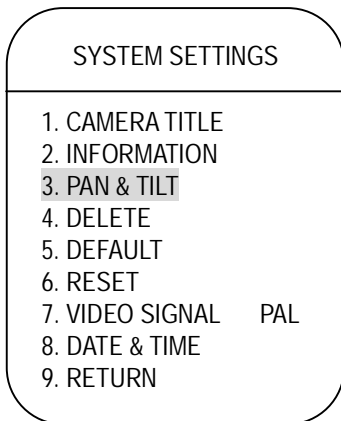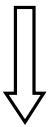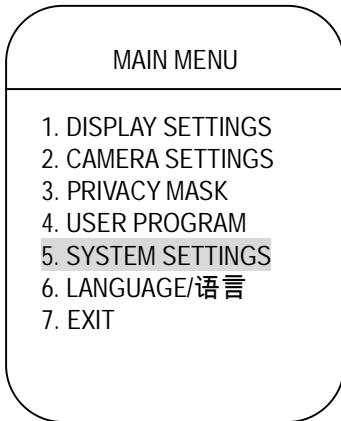

9.3.1 Auto Flip

1. Move the joystick and make the cursor to [AUTO FLIP], and enter the menu. Choose [ON] to enable this function, and disable this function while choosing [OFF].

 Operation Tips

When the camera tilts downward and goes just beyond the vertical position, the camera rotates 180 degrees. After the camera rotates, it will tilt up 90 degrees if user holds the joystick in the down position.

PAN & TILT	
1. AUTO FLIP	OPEN
2. IDLE TIME	000
3. IDLE ACTIVE	ON
4. ACTIVE OPTION	
5. RESET ACTIVE LAST START	
6. ACTIVE OPTION	
7. FAN ACTIVE TEMP (READ ONLY)	040
8. RETURN	

PAN & TILT	
1. AUTO FLIP	OPEN
2. IDLE TIME	000
3. IDLE ACTIVE	ON
4. ACTIVE OPTION	
5. RESET ACTIVE LAST START	
6. ACTIVE OPTION	
7. FAN ACTIVE TEMP (READ ONLY)	040
8. RETURN	

PAN & TILT	
1. AUTO FLIP	OPEN
2. IDLE TIME	000
3. IDLE ACTIVE	ON
4. ACTIVE OPTION	
5. RESET ACTIVE LAST START	
6. ACTIVE OPTION	
7. FAN ACTIVE TEMP (READ ONLY)	040
8. RETURN	

9.3.2 Idle Time

This setting allows the PTZ camera to implement an appointed action after getting into free time state for some time (1-240minutes). The default setting value is 0, showing not implementing action automatically.

1. make the cursor to "IDLE TIME", set automatic activation time, ranging from 0-240 (minutes), "IDLE TIME" means the operation action after activation, when idle time is set to be "0", the setting for "IDLE ACTIVE" is ineffective.
2. Control joystick, move cursor to "IDLE ACTIVE". Choose actions after activation.

The following options available:

- Default-no action
- Run presets
- Run scanning
- Run auto learning function
- Run touring

3. If [IDLE ACTIVE] evokes presets, move the joystick to [ACTIVE OPTION], there are 1-220 presets to chose.

9.3.3 Reset Active

The implementing action after PTZ switches on and self test. If no manual intervention, PTZ will run this action repeatedly. The default value is "no action"

1. Move joystick and make the cursor to "RESET ACTIVE" , choose actions after the PTZ is powered on:

The following options available




- No action
- Call presets
- Run scanning
- Run auto learning
- Run touring
- The state before power off

9.3.4 Fan Active TEMP (read-only)

When PTZ camera is applied in high temperature, its own temperature will increase. In order to keep the whole stability of PTZ, the fan will turn on after the temperature rises to some degree.

1. Move joystick and make the cursor to 'Fan active Temp'; Users can set temperature according to actual situation.

The default startup temperature of the fan is 40°, the user can enter "fan startup set" menu and adjust fan startup temperature. As shown in the chart, the temperature ranges from 0 to 60°.

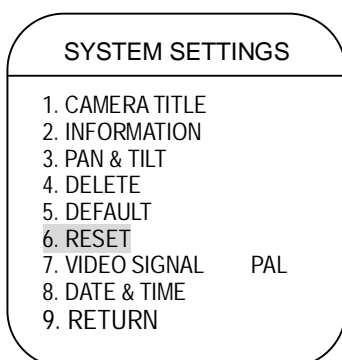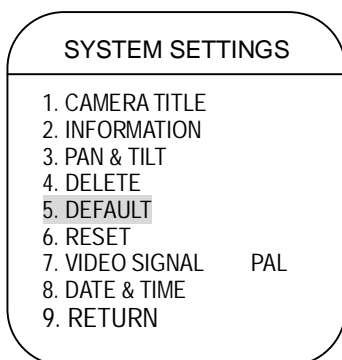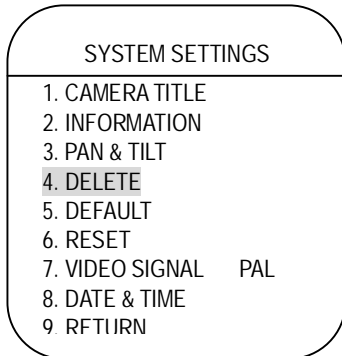

9.4 Delete

1. Press 'Menu' on the keyboard or evoke the presets no. 95 and 64 to enter the main menu, or press the preset no.1 twice continuously within 1 second.
2. Move the cursor to [SYSTEM SETTINGS], and enter the menu
3. Move the cursor to [DELETE], and then enter the sub-menu:

- ALL PRESET
- ALL TOUR
- ALL AUTO LEARNING
- ALL SCAN
- ALL MASK
- ALL TIMER
- ALL ALARM

Implementing the function" DELETES OPERATION" will make camera's parameters and system's parameters default value, delete all privacy window and alarm setting. Please use with caution.

4. Take deleting "ALL PRESET" as example to explain the operating process.

Move joystick and make the cursor to "ALL PRESET" , and then move the joystick to enter the deletion interface, press "open" , all presets will be deleted.



Note: Once the instruction of deleting is implemented, it can't be recovered. Please operate this function with caution.



9.5 Default

1. Press 'MENU' on the keyboard or evoke the presets no. 95 and 64 to enter the main menu.
2. Move joystick and make the cursor to [SYSTEM SETTINGS], and enter the sub-menu.
3. Move the cursor to "DEFAULT", and enter the reset interface
Press "OPEN" to implement [DEFAULT] function, press "CLOSE" to cancel the operation.

9.6 Restart

1. Choose "RESET" from 'SYSTEM SETTING'. Move joystick to left or right, and then PTZ will restart to execute the self-test.

9.7 Date & Time

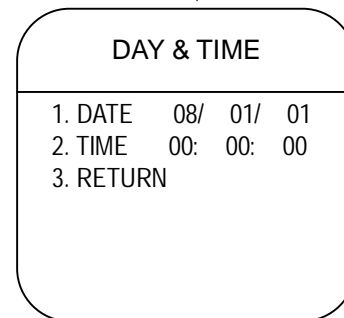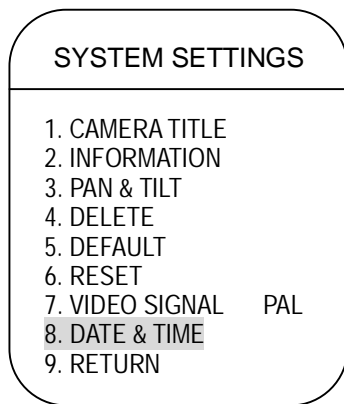


1. Press 'MENU' on the keyboard or evoke the presets no. 95 and 64 to enter the main menu.
2. Move joystick and make the cursor to 'SYSTEM SETTING', and enter the sub-menu;
3. Move joystick and make the cursor to 'Date & time', and enter the menu;
4. Move cursor to "TIME" or "DATE", clockwise or **anticlockwise** rotate the joystick cap to adjust the time and date, exit the interface to save. The date shows as year/month/day, and time will be minute/second in orders.

10. Language setup



1. Press "MENU" on keyboard or call No.95. No.64 preset position, then enter main menu.
2. Move cursor to "LANGUAGE"
3. Move joystick to select Chinese or English menu, exit the interface to save the settings.

11. Camera Menu Index

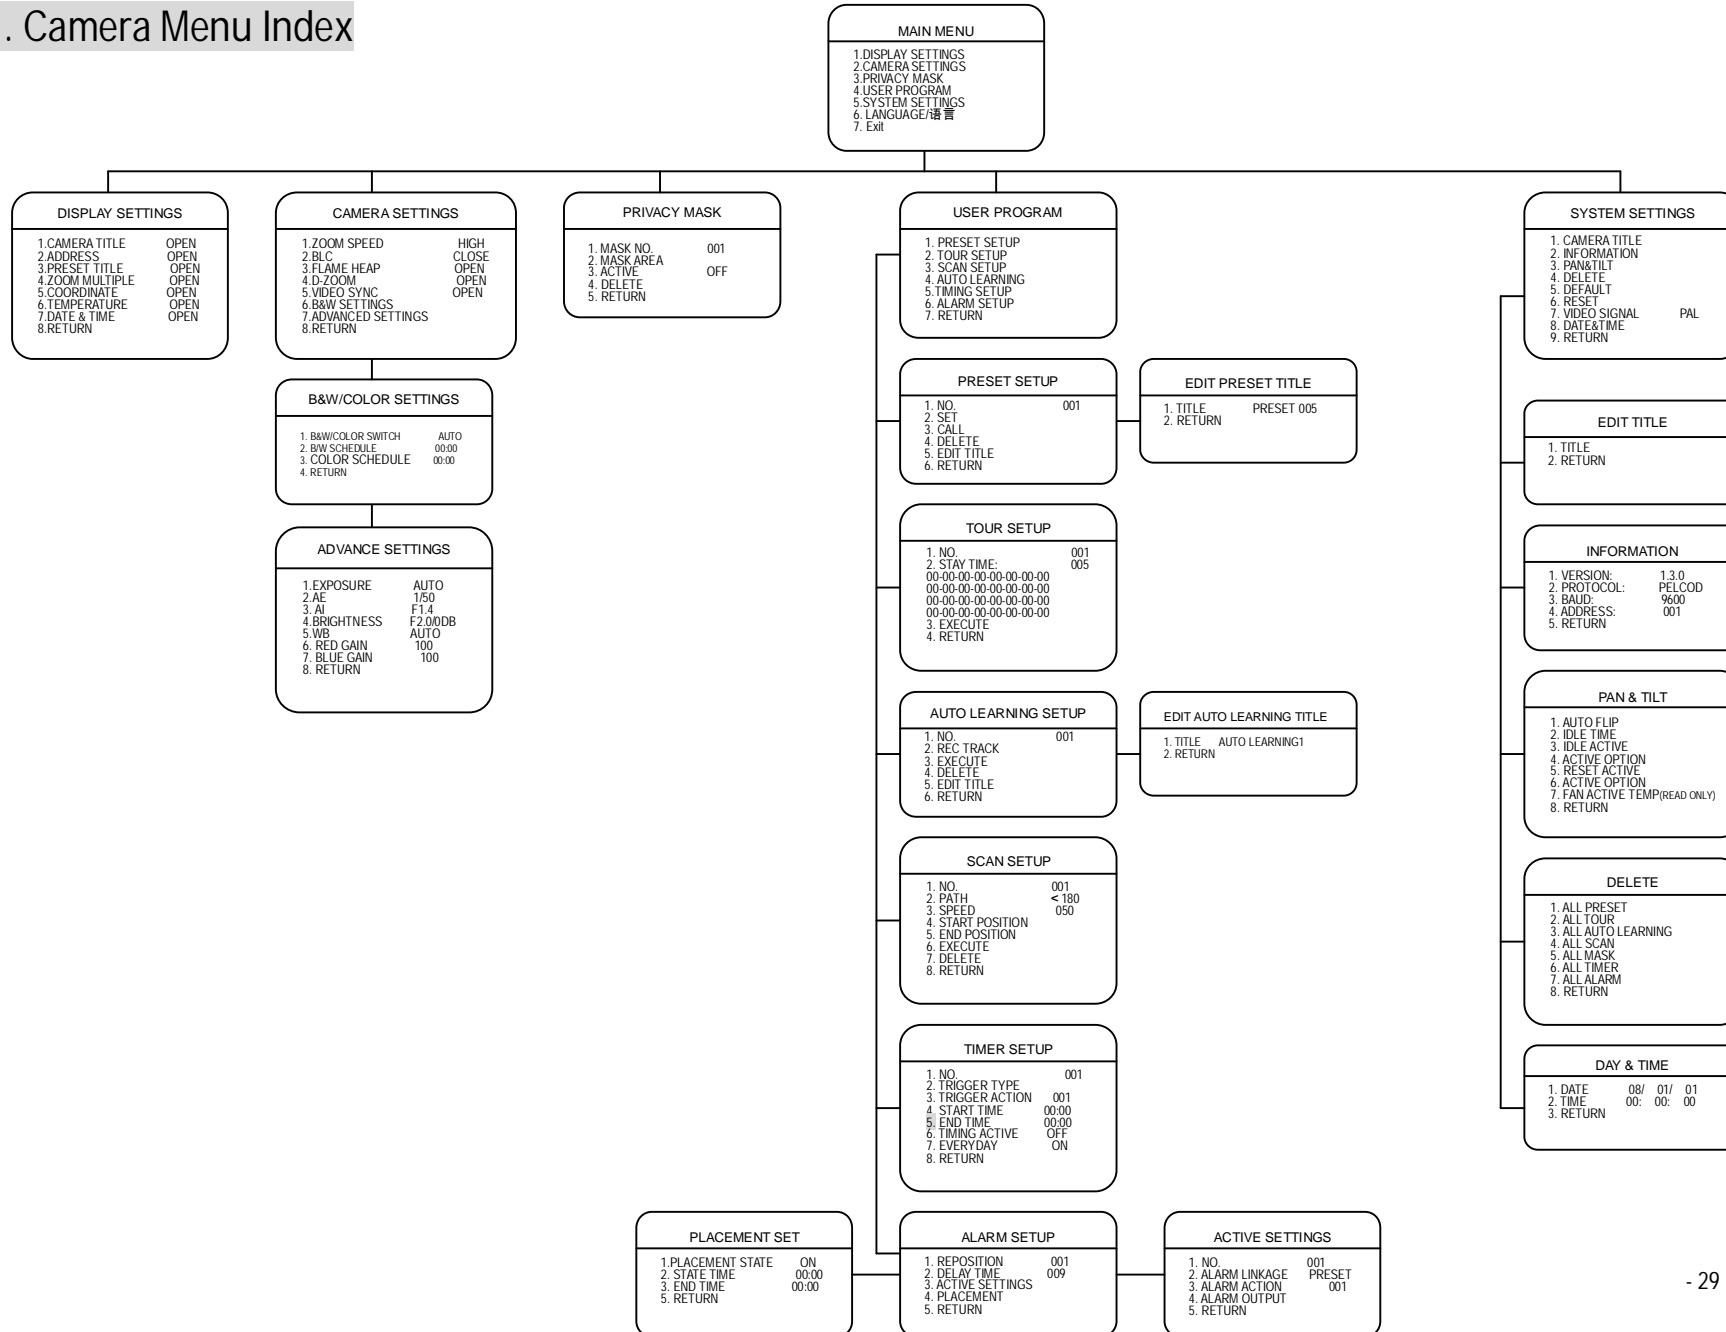

12. System Installation

12.1 Installation

1) Dimension

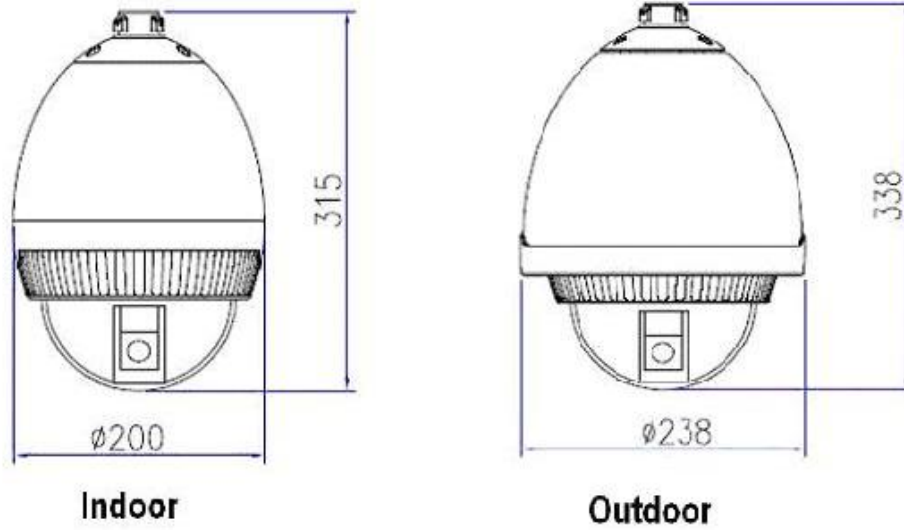


Figure 1

2) Installation Style

a) Wall Installation

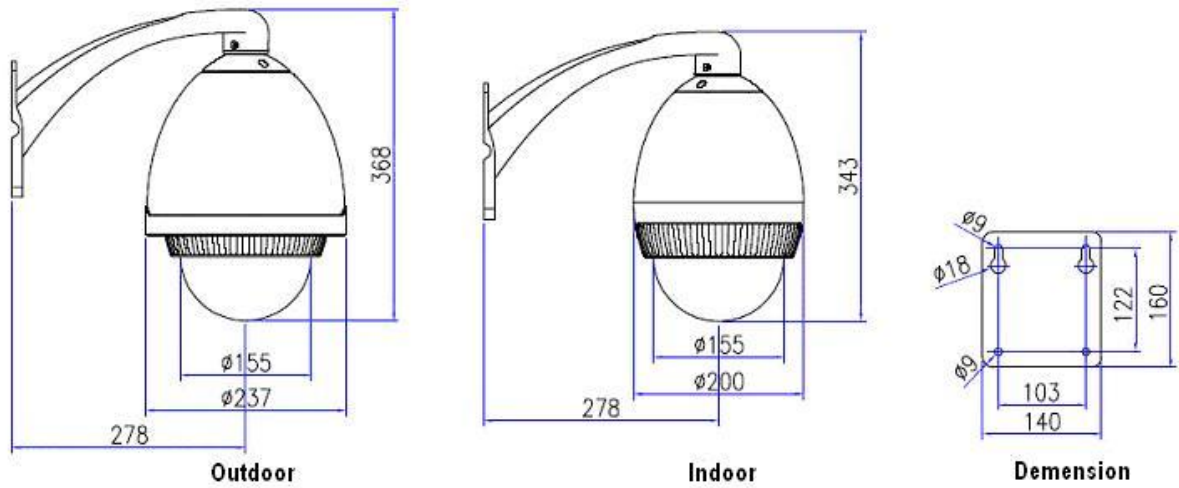


Figure 2

b) Pendant Installation

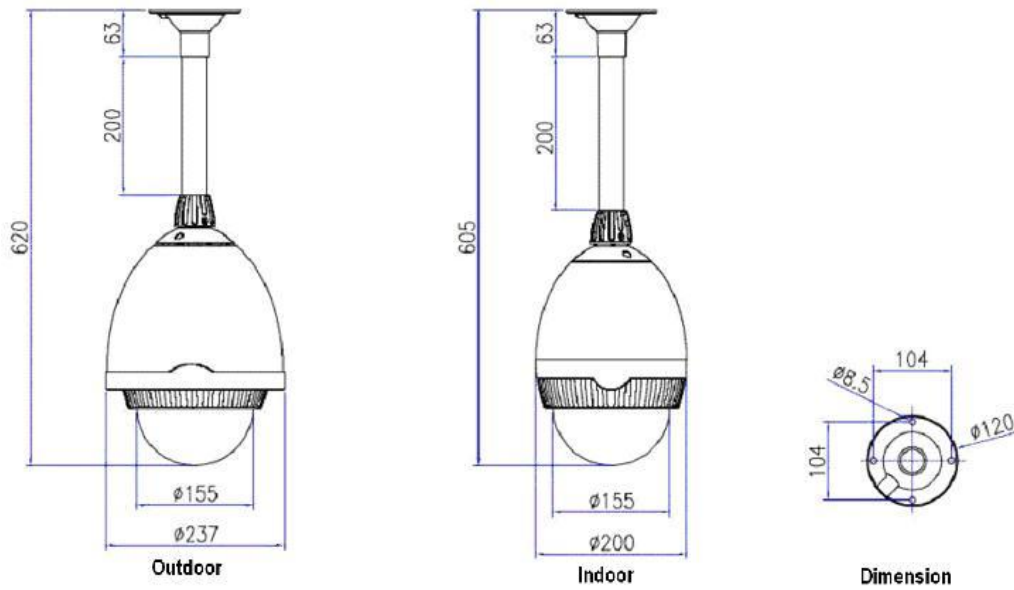


Figure 3

c) Ceiling Mounting

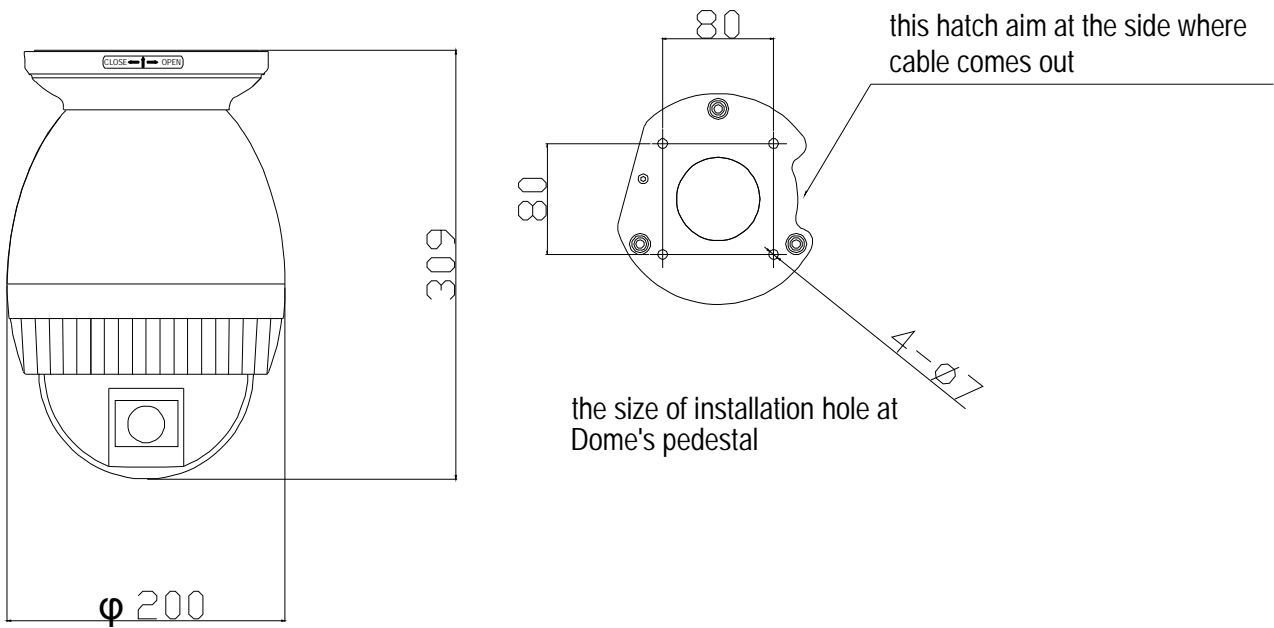


Figure 4

d) Ceiling mount

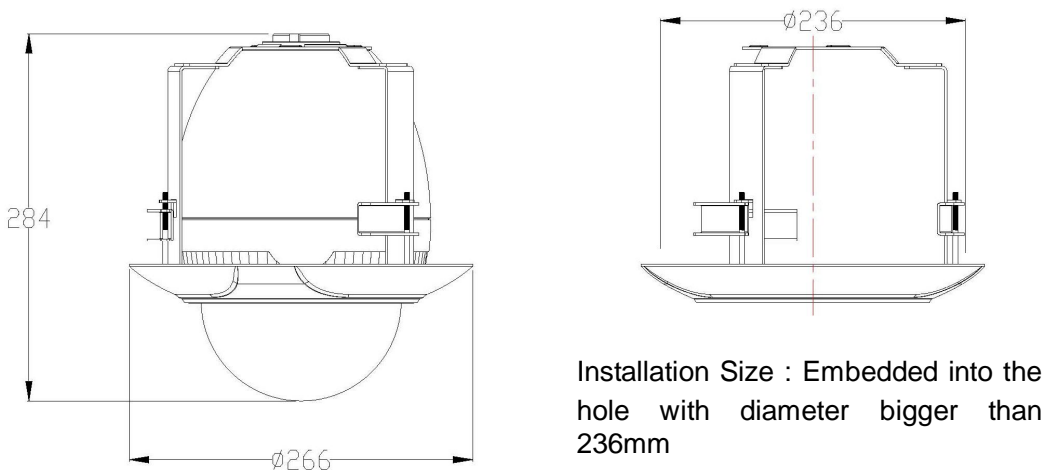


Figure 5

12.2 Installation Steps

Taking wall-installation style as example:

1. Unpacking the carton and carefully take out the dome camera and its attachments.
2. According to the size of Dome, drill the installation hole in the wall and fixed expander bolts.(Also can drill hole according to fixed hole of bracket)
3. Rotate the vitreous cover CCW (counterclockwise) and take it out. (see Figure 6)

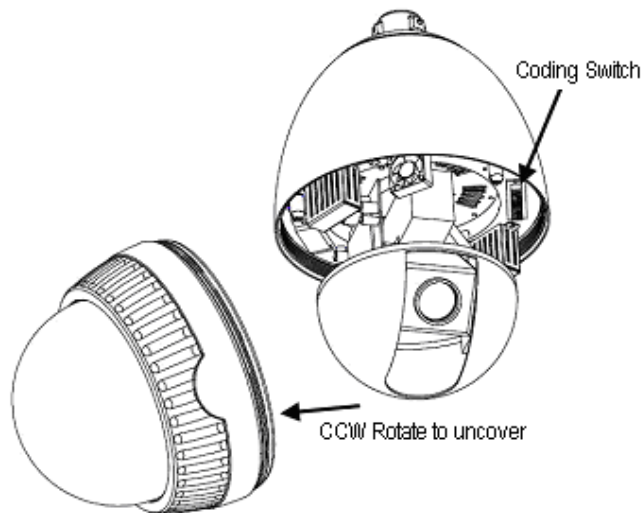


Figure 6

4. Set up camera protocol and baud-rate according to Table 2 referring to Figure 4.1. Set the dome address (ID) according to Table 1.
5. Rotate the vitreous cover CW (clockwise) to install Dome.
6. Fix the bracket on the main body of dome, rotate the Dome CW (clockwise), and keep the bracket hole and the mounting flange in line. Tighten the three screws.(refer to Figure7)

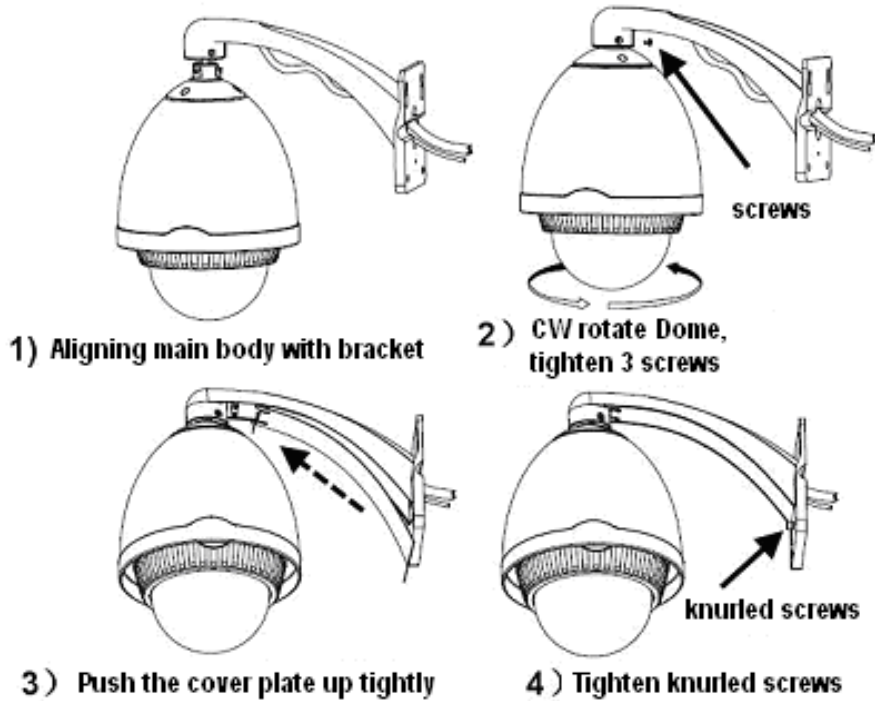


Figure 7

7. Fetch the signal cable, video cable and power wires from bracket. Fix the cover plate, tighten the knurled-screw (refer to Figure 6).
8. Fix the assembled Dome on the wall and tighten 4 PCS knurled-screws.
9. Connect the signal cable of the system as Figure 8.

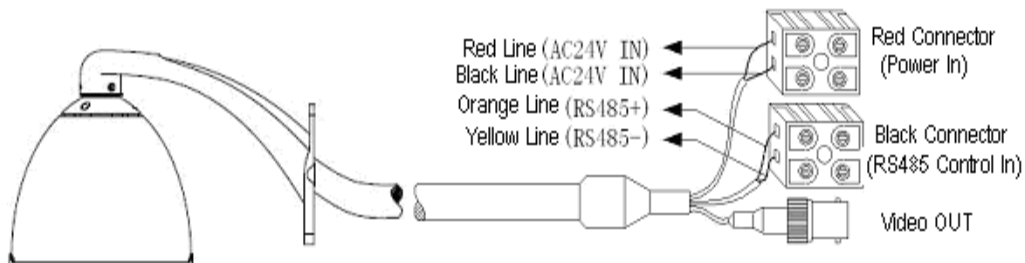


Figure 8

10. Connect alarm input and alarm output according to instructions of socket D3.(Figure 9)
 - 4 channels Normal Open (NC) alarm input, close contact to trigger alarm.
 - 1 pair of alarm out put: Normal Open and Normal Close.
 - Once the system receive alarm input signal, dome will no delay work as program setting, to achieve startup PTZ and Camera, shift the video of alarmed region to monitor, adjust the place of alarm region, monitor the preset. Response the situation of alarming region really and quickly.

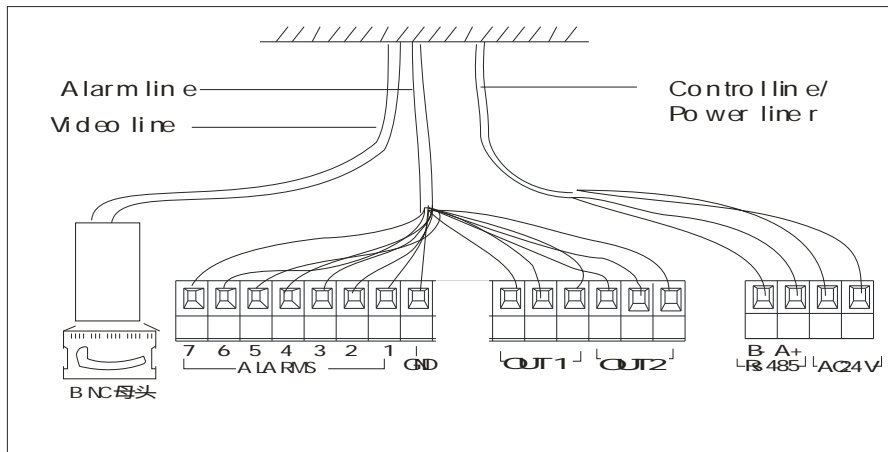


Figure 9

- ⚠ Alarm Input: Input signal of switch type, any other input signal will damage dome.
- ⚠ When multi-channel with alarm signal, dome will respond one by one, the removed time is two sec.
- ⚠ Once the dome have alarm input, dome will not respond “scanning”、“patrol”、“remember tracking” etc function.

➤ Pin alarm input and output connection paraphrase:

7 Pin alarm input		2Pin alarm output	
BLUE	ALMIN COM	AQUA	ALMOUT- COM
PINK	ALARM-1IN	AZURY	ALMOUT-1 NC
WHITE	ALARM-2IN	PURPLE	ALMOUT-1NO
BLACK	ALARM-3IN	BROWN	ALMOUT-2COM
RED	ALARM-4IN	GRAY	ALMOUT-2NC
ORANGE	ALARM-5IN	SHIELD	ALMOUT-2 NO
YELLOW	ALARM-6IN		
GREEN	ALARM-7IN		

11. Instruction of surface installation:

According to the size of Dome's fixed board, drill the installation hole on the ceiling and fixed expander bolts(Also can drill hole according to fixed hole of fixed board. Fix the fixed board, fix the main body of dome on fixed board along the guide pole, rotate the Dome anticlockwise, tighten the screws(figure10)

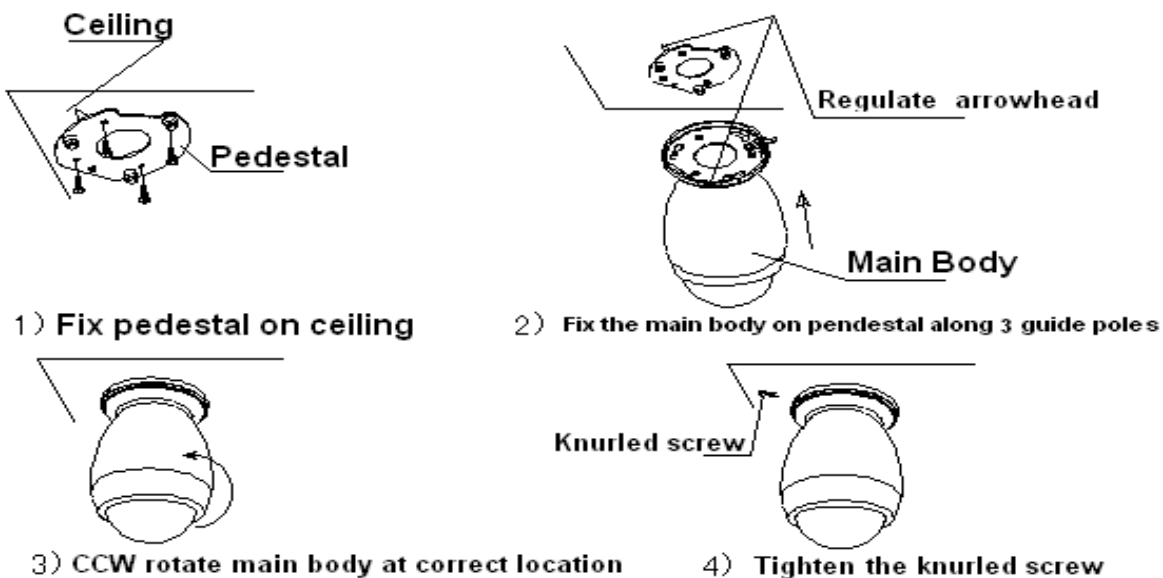


Figure10

12.3 Installation Steps (taking ceiling mount as an example)

1. Open the package, and take out the camera and accessories.
2. Drill an installation hole in the ceiling with its diameter bigger than 236mm slightly (The ceiling support intensity shall be considered; A bracket is necessary sometimes to increase the support intensity).
3. Rotate clockwise and open the ornament cover components; then **anticlockwise** rotate the transparent cover components, and remove them. (As shown in figure 11) 。

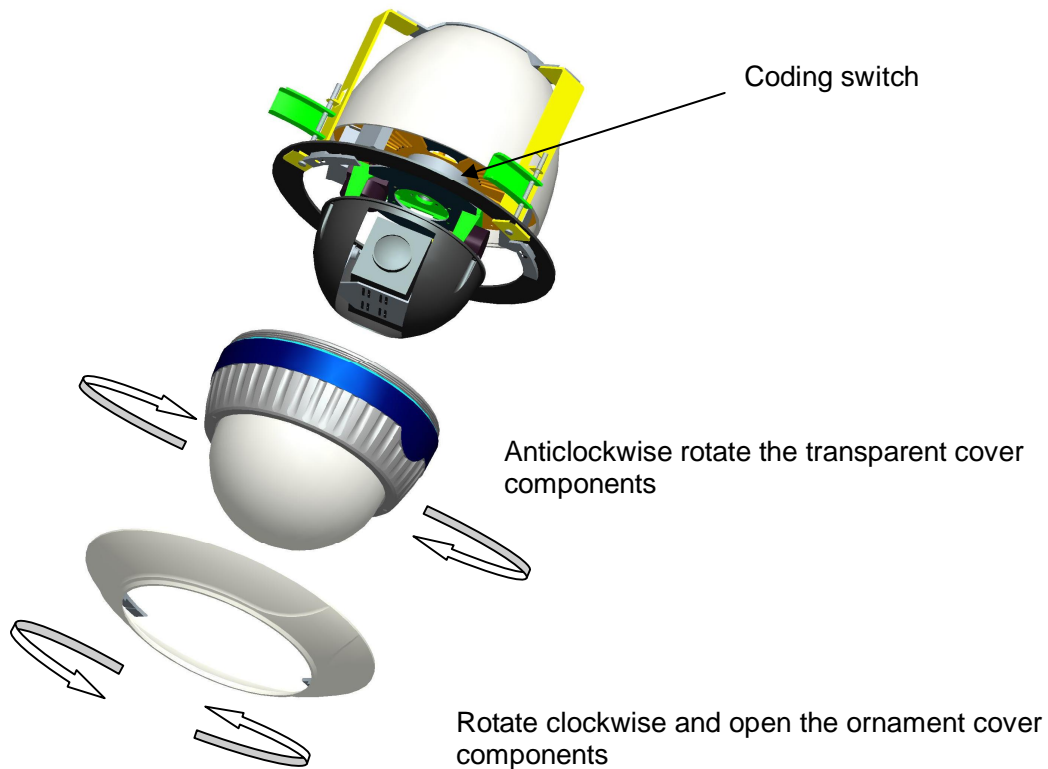


Figure 11

4. Referring to the table 2, set the camera protocol and baud rate by the coding switch as shown in figure 6. Check if the camera address is compatible with the address that you want; if not, set the camera to corresponding address as per table 1.
5. Install the bracket components into the installation hole, fasten the screws to fix the bracket; clockwise rotate and fasten the transparent cover, and then anticlockwise rotate the ornament cover components to install them, as per figure 12.

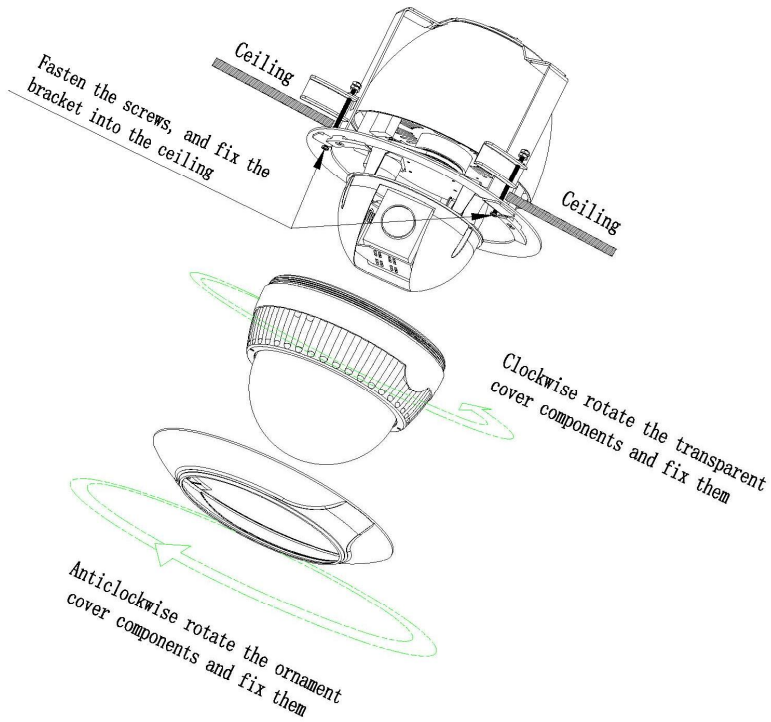


Figure 12

12.4 Disassembly and installation of Main Body

- 1 . Quick disassembly design, be easy to maintain and change the main body.
- 2 . Turn vitreous cover on its axis in CCW (counter clockwise) direction and separate it down.
- 3 .Then loosen knurled-screw as shown bellow. Hold the drier shelf, look up the dome, revolve main body CCW (counter clockwise) and fetch it out (Figure13).

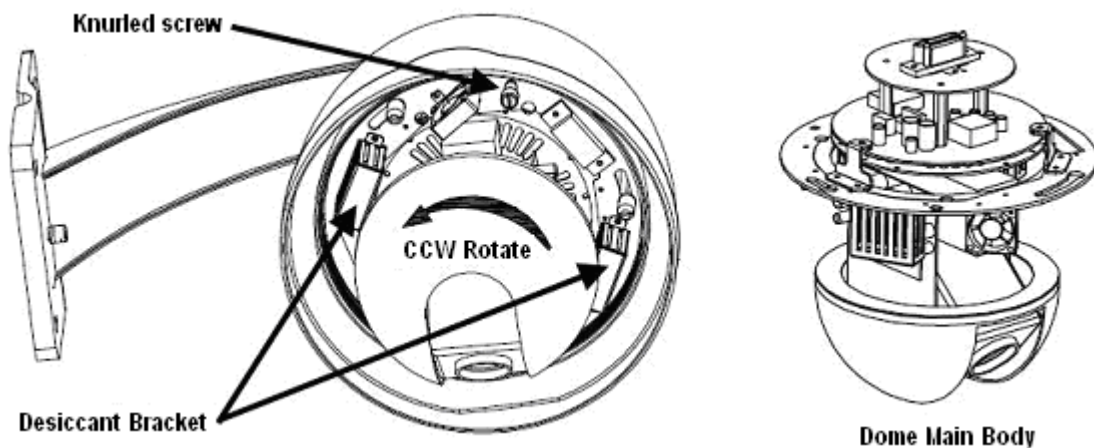


Figure 13

- 4 . The steps of installation are reverse to those of disassembly.

12.5 Dome Configuration.

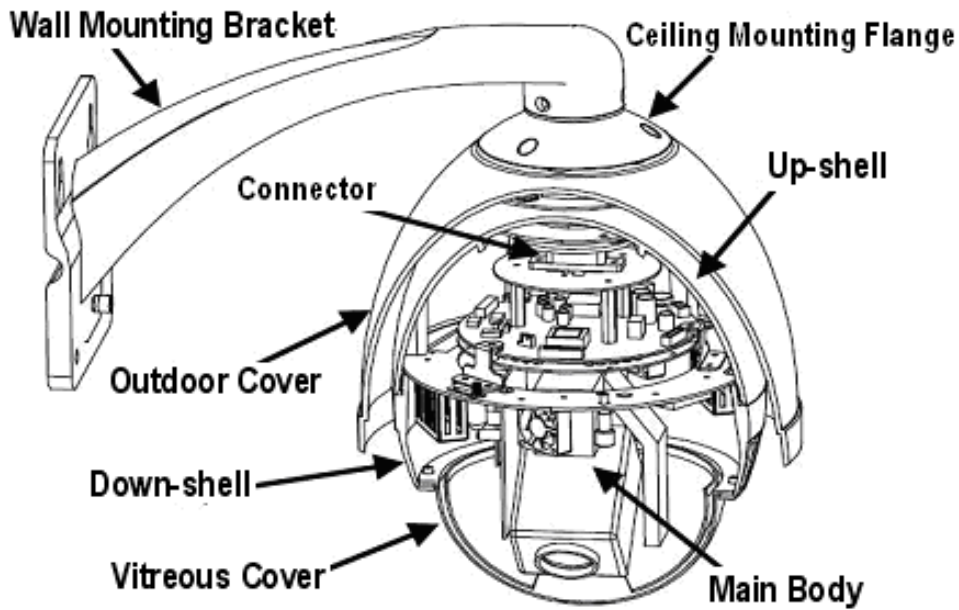


Figure 14

13. Dome Camera Setup

● 13.1 Address / Protocol Coding Switch Drawing

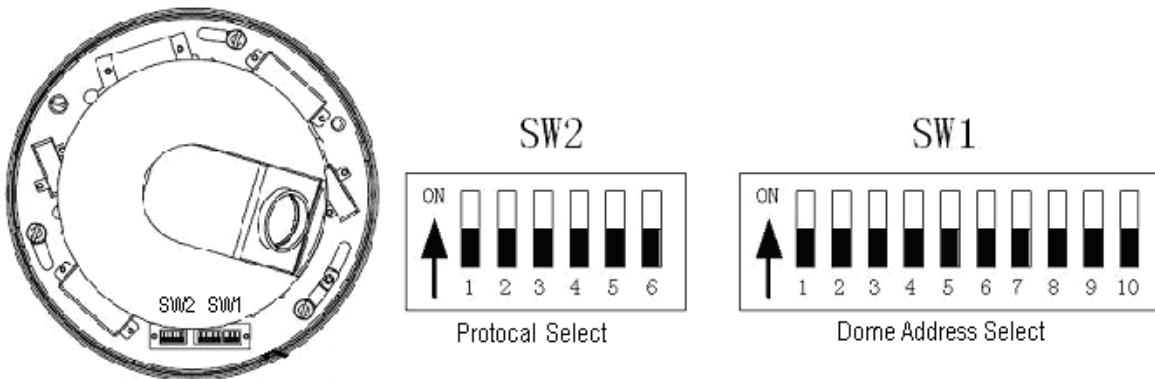


Figure 15

13.2 Address Setup.


As shown in Figure 12, SW1 is used to set address of the dome camera from 1 – 1023. The coding switches from DIP-10 to DIP-1 are equivalent to a 10-bit binary digital. DIP-10 is MSB while DIP-1 is LSB. The state "ON" of each bit means 1 while "OFF" means 0. Following table shows states of coding switches of some addresses.

Dome Address	States of Coding Switches									
	DIP-1	DIP-2	DIP-3	DIP-4	DIP-5	DIP-6	DIP-7	DIP-8	DIP-9	DIP-10
1	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
2	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF


3	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
4	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
5	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
6	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
7	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
8	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
9	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
10	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
11	ON	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
12	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
13	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
14	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
15	ON	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
16	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
17	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
18	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
...
1023	ON	ON	ON	ON	ON	ON	ON	ON	ON	ON

Table1


For Example:

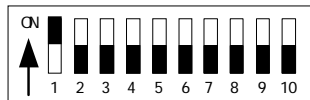


Speed Dome Address=1

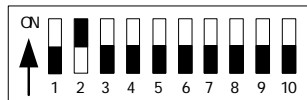


Speed Dome Address=2

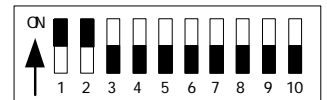

Speed Dome Address=3

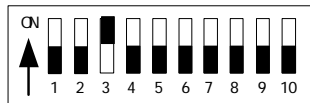

Speed Dome Address=4

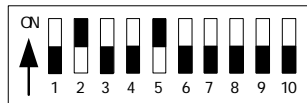

Speed Dome Address=18



Speed Dome Address=1023

13.3 Protocol and Default Baudrate Setup.

As shown in Figure 12, SW2 is used to set the protocol of communication and the baud rate used by the dome camera. DIP-4 to DIP-1 of SW2 is used to select protocols and 16 different protocols can be selected in maximum. Following table shows states of coding switches of protocols selected by the dome camera.

Protocols	DIP status				Normal Baud Rate	
	DIP-1	DIP-2	DIP-3	DIP-4	DIP-5	DIP-6
SAMSUNG	ON	ON	OFF	OFF	OFF	OFF
NEON	OFF	OFF	OFF	OFF	OFF	OFF
Reserved	OFF	ON	OFF	OFF	OFF	ON
PELCO-D	ON	OFF	OFF	OFF	OFF	OFF
PELCO-P/4800	OFF	ON	OFF	OFF	ON	OFF
PELCO-P/9600					OFF	ON
PANASONIC	ON	OFF	ON	OFF	OFF	ON
Longcomity	OFF	ON	ON	OFF	OFF	ON
HUNDA600	ON	ON	ON	OFF	OFF	ON
LILIN	OFF	OFF	OFF	ON	ON	OFF
VICON	ON	OFF	OFF	ON	ON	OFF
MOLYNX	OFF	ON	OFF	ON	OFF	ON
KALATEL	ON	ON	OFF	ON	ON	OFF
VCL	OFF	OFF	ON	ON	OFF	ON
DAIWA	ON	OFF	ON	ON	OFF	ON
ALEC	OFF	ON	ON	ON	OFF	ON

Ultrak	ON	ON	ON	ON	OFF	ON
--------	----	----	----	----	-----	----

Table 2

Some protocols and the states of the coding switches of normal baud rate of these protocols show as follows:

13.4 Communication Baudrate Setup.

As shown in Figure 12, SW2 is used to set the protocol of communication and the baud rate used by the dome camera. DIP-6 and DIP-5 of SW2 are used to select the baud rate of communication and 4 different baud rates can be selected in maximum. If the controller adopts non-standard baud rate, you can adjust it to be identical with that of the main machine as per the following table.

Baudrate	Baudrate Setting					
	DIP-1	DIP-2	DIP-3	DIP-4	DIP-5	DIP-6
2400bps					OFF	OFF
4800bps					ON	OFF
9600bps					OFF	ON
19200bps					ON	ON

Table 3

13.5 Selection of the Terminal Resistor of the Dome Camera.

As shown in Figure 16, JP1 is the select switch of the 120 Ω terminal resistor on the bus RS485, on which only one terminal resistor of the dome camera at the farthest end can be connected, while the terminal resistors of other devices should be opened.

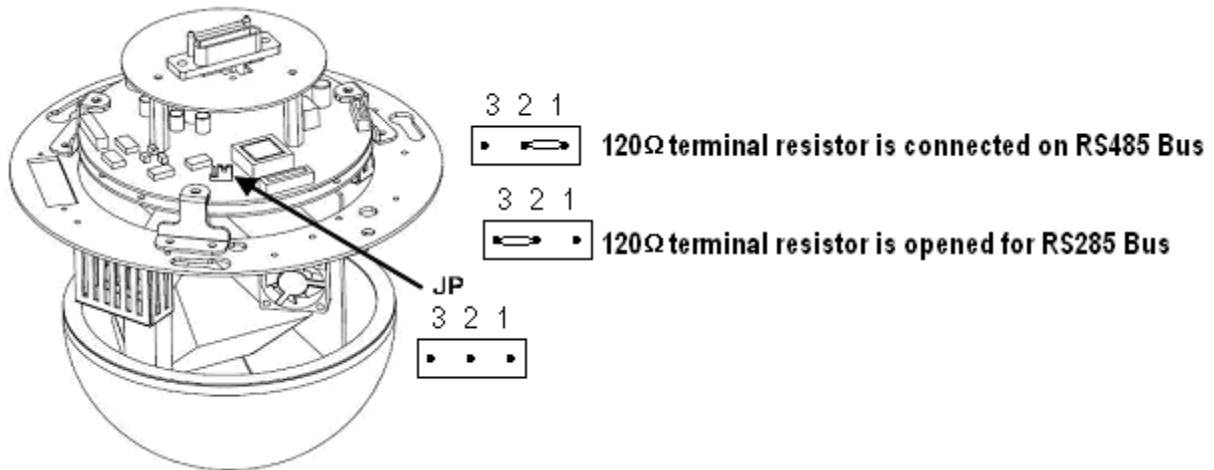


Figure 16

14. Troubleshooting

Problems	Possible Causes	Remedies
No action when power is switched on	Power supply fault	Replace
	Bad connection of the power	Correct
	Transformer damaged	Replace
Abnormal self-check. Images with motor noise	Mechanical failure	Repair
	Camera inclined	Reinstall
	Power supply not enough	Replace
Normal self-check but no images	Video signal fault	Reinstall
	Bad connection of the video	Press to connect well
	Camera damaged	Replace

Normal self-check but out of control	RS485 bus bad connection	Check the RS485 connection
	Dome ID setup is wrong	Reselect
	Protocol setup is wrong	Reset and Switch ON again
Vague image	Bad connection of the video	Press to connect well
	Power supply not enough	Replace
Dome camera out of control	Self check error	Switch ON again
	Bad connection of control	Press to connect well
	Bad control of matrix	Switch ON again
Lens of Dome out of control	In manual state	
Use IR Remote controller on DVR but out of control	Address of IR Remote controller error	Correct
	IR Remote controller no battery	Change battery

Appendix A : RS485 Bus Basic Knowledge

1. Characteristics of RS485 Bus

As specified by RS485 standards, RS485 Bus is of semiduplex data transmission cables with characteristic impedance as 120Ω. The maximum load capacity is 32 unit loads (including main controller and controlled equipment).

2. Transmission distances of RS485 Bus

When user selects the 0.5mm (24AWG) twisted pair wires as data transmission cable, the maximum theoretical transmitting distances are as follows:

Band Rate	Maximum Transmitting Distance
2400 Bps	1800m
4800 Bps	1200m
9600Bps	800m

Table 4

3. Connection and terminal resistor

a) The RS485 standards require a daisy-chain connection between the equipment. There must be terminal resistors with 120Ω impedance at both ends of the connection (refer to Figure 16). Please refer to Figure 17 simple connection. "D" should not exceed 7m.

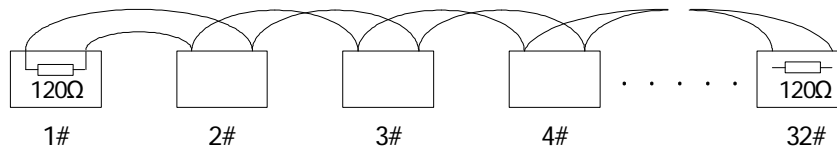


Figure 17

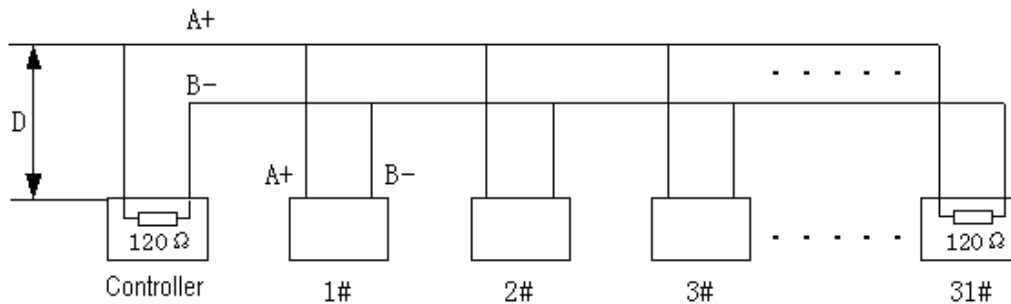


Figure 18

b) The connection of 120Ω terminal resistor: The terminal resistor is ready on the Protocol PCB. There are two kinds of connection. Refer to the Protocol PCB jumper setting form (refer to Figure 18). In the Figure 16 it is the factory default connection. The jumper is seated on Pin2&Pin3 and the terminal resistor is not connected. When connecting the 120Ω terminal resistor, user should plug the jumper on Pin1&Pin2, and the terminal resistor is connected.

4. Problems in practical connection

In some circumstances user adopts a star configuration in practical connection. The termination resistors must be connected to the two equipment that are farthest away from each other, such as equipment 1# and 15# in Figure19. As the star configuration is not in conformity with the requirements of RS485 standards, problems such as signal reflections, lower anti-interference performance arise when the cables are long in the connection. The reliability of control signals is decreased with the phenomena that the dome does not respond to or just responds at intervals to the controller, or does continuous operation without stop (refer to Figure20).

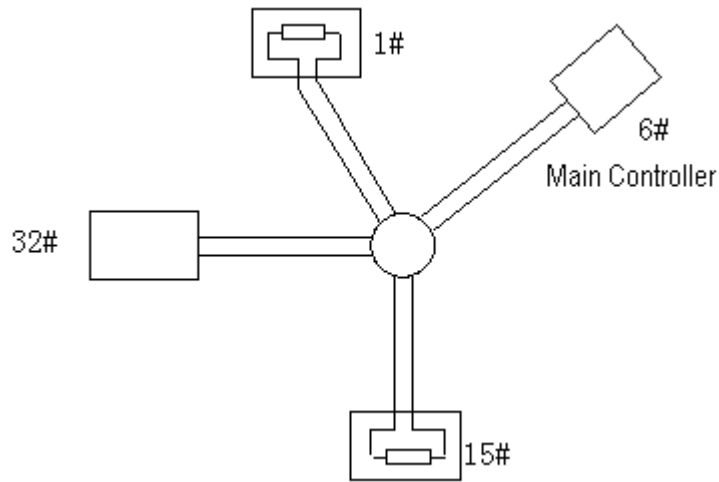


Figure 19

In such circumstances the usage of a proper RS485 distributor is recommended. The distributor can change the star configuration connection to the mode of connection stipulated in the RS485 standards. The new connection achieves reliable data transmission (refer to Figure 20).

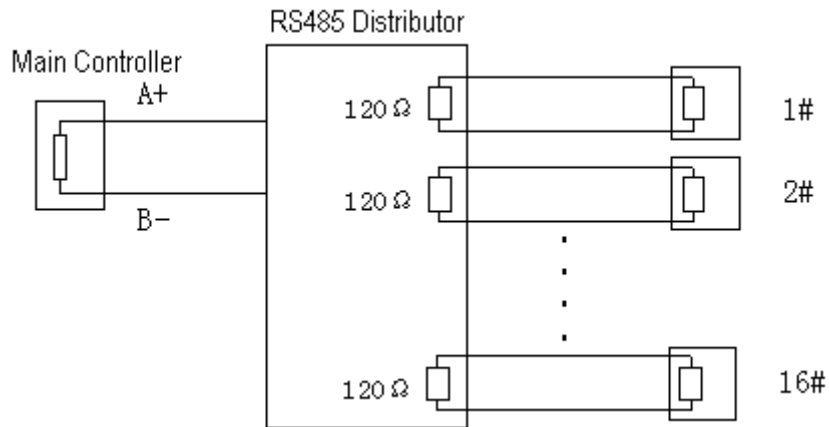


Figure 20

Appendix B : The Cleaning of Clear Down Cover

To obtain constant clear videos, user should clean the down cover periodically.

- Be cautious when cleaning. Hold the down cover ring only to avoid direct touch to the acrylic down cover. The acid sweat mark of fingerprint will corrode the coating of down cover and scratch on down cover will cause vague images.
- Use soft dry cloth or the substitute to clean the inner and outer surfaces.
- For hard contamination, use neutral detergent.

Appendix C : 24VAC Wire Diameter and Transmission Distance Comparison Chart

While the wire diameter determinate and 24VAC loss rate under 10%, the longest transmission distance is recommended as following chart.

Transmission Distance feet(m) Power[VA]	Wire diameter (mm)			
	0.8000	1.000	1.250	2.000
10	283 (86)	451 (137)	716 (218)	1811 (551)
20	141 (42)	225 (68)	358 (109)	905 (275)
30	94 (28)	150 (45)	238 (72)	603 (183)
40	70 (21)	112 (34)	179 (54)	452 (137)
50	56 (17)	90 (27)	143 (43)	362 (110)
60	47 (14)	75 (22)	119 (36)	301 (91)
70	40 (12)	64 (19)	102 (31)	258 (78)
80	35 (10)	56 (17)	89 (27)	226 (68)
90	31 (9)	50 (15)	79 (24)	201 (61)
100	28 (8)	45 (13)	71 (21)	181 (55)
110	25 (7)	41 (12)	65 (19)	164 (49)
120	23 (7)	37 (11)	59 (17)	150 (45)
130	21 (6)	34 (10)	55 (16)	139 (42)
140	20 (6)	32 (9)	51 (15)	129 (39)
150	18 (5)	30 (9)	47 (14)	120 (36)
160	17 (5)	28 (8)	44 (13)	113 (34)
170	16 (4)	26 (7)	42 (12)	106 (32)
180	15 (4)	25 (7)	39 (11)	100 (30)
190	14 (4)	23 (7)	37 (11)	95 (28)
200	14 (4)	22 (6)	35 (10)	90 (27)

Table 5

Appendix D : Wire Gauge Conversion Chart

Bare wire diameter metric size (mm)	AWG (Approximate)	SWG (Approximate)	Bare wire cross sectional area (mm ²)
0.050	43	47	0.00196
0.060	42	46	0.00283
0.070	41	45	0.00385
0.080	40	44	0.00503
0.090	39	43	0.00636
0.100	38	42	0.00785
0.110	37	41	0.00950
0.130	36	39	0.01327
0.140	35		0.01539
0.160	34	37	0.02011
0.180	33		0.02545
0.200	32	35	0.03142
0.230	31		0.04115
0.250	30	33	0.04909
0.290	29	31	0.06605
0.330	28	30	0.08553
0.350	27	29	0.09621
0.400	26	28	0.1237
0.450	25		0.1602
0.560	24	24	0.2463
0.600	23	23	0.2827
0.710	22	22	0.3958
0.750	21		0.4417
0.800	20	21	0.5027
0.900	19	20	0.6362

1.000	18	19	0.7854
1.250	16	18	1.2266
1.500	15		1.7665
2.000	12	14	3.1420
2.500			4.9080
3.000			7.0683

Table 6

Appendix E : Lightning Proof and Surge Signal Proof

The product adopts TVS lightning proof technology to prevent from damage by lightning strike below 1500 W and impulse signals such as surge; but it is also necessary to abide by the following precautions to ensure electrical safety based on practical circumstances:

- Keep the communication cables at least 50 meters away from high voltage equipment or cables.
- Make outdoor cable laying-out under eaves as possible as you can.
- In open area shield cables in steel tube and conduct a single point ground to the tube. Trolley wire is forbidden in such circumstances.
- In strong thunderstorm or high faradic zone (such as high voltage transformer substation), extra strong lightning proof equipment must be installed.
- Take the building lightning proof requirements into account to design the lightning proof and grounding of outdoor equipment and cable laying-out in accordance with the national and industrial standards.
- The system must be grounded with equal potentials. The earth ground connection must satisfy the anti-interference and electrical safety requirements and must not be short connected with high voltage electricity net. When the system is grounded separately, the resistance of down conductor should be $\leq 4\Omega$ and the sectional area of down conductor should be $\leq 25\text{mm}^2$ (refer to Figure E.1).

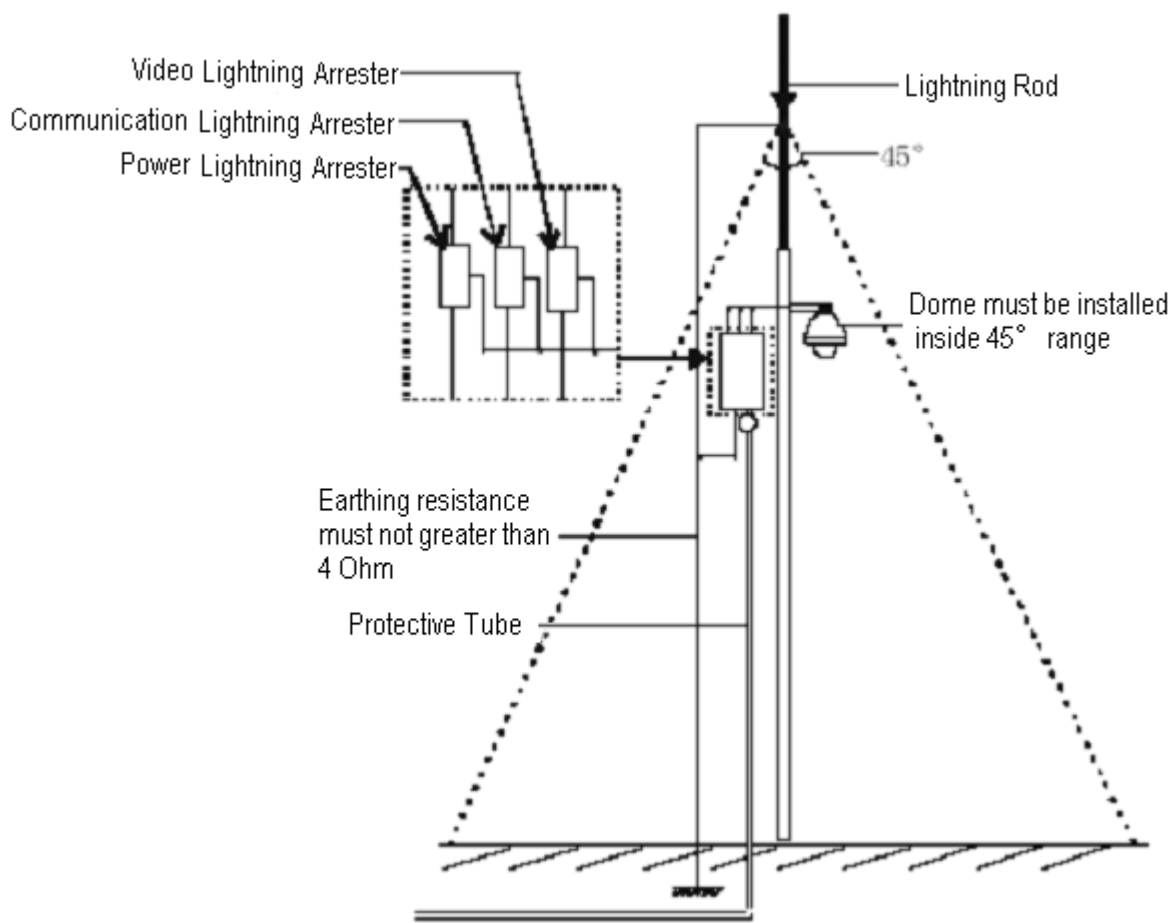


Figure 21

Appendix F : Camera par

Model	VK-S454ER	VK-S454R	FCB-EX480C	FCB-EX480CP	FCB-EX45C	FCB-EX45Cp	FCB-EX980S	FCB-EX1010P	FCB-EX980	FCB-EX980P	VK-S214ER
Specification	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Synchronizing system	Internal	Internal	Internal / External								
Image	Color & B/W	Color & B/W	Color & B/W	Color & B/W	Color	Color	Color & B/W	Color & B/W	Color & B/W	Color & B/W	Color
Scan	2:1 Progressive scanning										
Horizontal Resolution	480TVL	480TVL	480TVL	480TVL	460TVL	460TVL	480TVL	540TVL	480TVL		480TVL
Illumination	0.1Lux	0.1Lux	Color 0.7Lux B/W 0.1lux	Color 0.7lux B/W 0.1lux	0.1Lux	0.1Lux	Color 2.0Lux B/W0.01lux	0.1Lux	Color 1.0lux B/W0.01Lux		0.1Lux
Aperture	Auto/Manual										
Focus	Auto/Manual										
Zoom	23	23	18		18		26	36	26		22
Focus	3.6-82.8 mm	3.6-82.8 mm	4.1-73.8mm		4.1-73.88mm		3.5-91mm	3.4-122.4mm	3.5-91mm		4-88mm
Visual Angle	Wide-angle54° Recess Angle2.5°	Wide-angle 54° Recess Angle2.5°	Wde-angle 48 ° Recess Angle2.8 °		Wide-angle 48 ° Recess Angle2.8 °		Wide-angle42.2 ° Recess Angle1.6 °	Wide-angle57.8 ° Recess Angle1.7 °	Wide-angle54.2 ° Recess Angle2.2 °		Wide-angle47.3 ° Recess Angle2.2 °
BLC	On /Off										
GC	On / Off(R,B Tunable)										
Privacy Area	Can be set up										
Signal system	PAL	NTSC	NTSC	PAL	NTSC	PAL	NTSC	PAL	NTSC	PAL	PAL
S/N Ratio	More than 50dB										
Video output width	1.0±0.2V p-p										
Video output	Female BNC										
Slow shutter	Can be set										